



# **SwitchX 36-Port QSFP 40Gb/s Ethernet System Hardware User Manual**

P/N:MSX1035B-1BRR, MSX1035B-1SFR, MSX1036B-1BRR, MSX1036B-1SFR

Rev 1.1

## NOTE:

THIS HARDWARE, SOFTWARE OR TEST SUITE PRODUCT (“PRODUCT(S)”) AND ITS RELATED DOCUMENTATION ARE PROVIDED BY MELLANOX TECHNOLOGIES “AS-IS” WITH ALL FAULTS OF ANY KIND AND SOLELY FOR THE PURPOSE OF AIDING THE CUSTOMER IN TESTING APPLICATIONS THAT USE THE PRODUCTS IN DESIGNATED SOLUTIONS. THE CUSTOMER’S MANUFACTURING TEST ENVIRONMENT HAS NOT MET THE STANDARDS SET BY MELLANOX TECHNOLOGIES TO FULLY QUALIFY THE PRODUCT(S) AND/OR THE SYSTEM USING IT. THEREFORE, MELLANOX TECHNOLOGIES CANNOT AND DOES NOT GUARANTEE OR WARRANT THAT THE PRODUCTS WILL OPERATE WITH THE HIGHEST QUALITY. ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT ARE DISCLAIMED. IN NO EVENT SHALL MELLANOX BE LIABLE TO CUSTOMER OR ANY THIRD PARTIES FOR ANY DIRECT, INDIRECT, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES OF ANY KIND (INCLUDING, BUT NOT LIMITED TO, PAYMENT FOR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY FROM THE USE OF THE PRODUCT(S) AND RELATED DOCUMENTATION EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



Mellanox Technologies  
350 Oakmead Parkway Suite 100  
Sunnyvale, CA 94085  
U.S.A.  
[www.mellanox.com](http://www.mellanox.com)  
Tel: (408) 970-3400  
Fax: (408) 970-3403

Mellanox Technologies, Ltd.  
Beit Mellanox  
PO Box 586 Yokneam 20692  
Israel  
[www.mellanox.com](http://www.mellanox.com)  
Tel: +972 (0)4 909 7200 ; +972 (0)74 723 7200  
Fax: +972 (0)4 959 3245

© Copyright 2012.

Mellanox, Mellanox logo, BridgeX, ConnectX, CORE-Direct, InfiniBridge, InfiniHost, InfiniScale, PhyX, SwitchX, Virtual Protocol Interconnect and Voltaire are registered trademarks of Mellanox Technologies, Ltd. FabricIT, MLNX-OS, Unbreakable-Link, UFM and Unified Fabric Manager are trademarks of Mellanox Technologies, Ltd.  
All other trademarks are property of their respective owners.

SwitchX 40GigE 1U Ethernet Switch Hardware User Manual

# Table of Contents

<b>Table of Contents</b>	<b>3</b>
<b>List of Figures</b>	<b>5</b>
<b>List of Tables</b>	<b>7</b>
<b>Revision History</b>	<b>8</b>
<b>About this Manual</b>	<b>9</b>
Intended Audience	9
Related Documentation	9
Conventions	9
Mellanox Part Numbering Legend	10
<b>Chapter 1 Overview</b>	<b>11</b>
1.1 Features	12
1.1.1 Full Feature List	12
1.2 Serial Number and Product Version Information	13
<b>Chapter 2 40 Gb/s Ethernet</b>	<b>14</b>
<b>Chapter 3 Basic Operation and Installation</b>	<b>15</b>
3.1 Switch Platform Hardware Overview	15
3.1.1 Status LEDs	15
3.1.2 Reset Button	21
3.2 Air Flow	21
3.3 QSFP Cable Power Budget Classification	22
3.4 Interfaces	23
3.4.1 Port Connector Interfaces	23
3.4.2 Management and Firmware Updating Interfaces	23
3.5 Switch Platform Installation and Operation	25
3.5.1 Installation Safety Warnings	25
3.5.2 Mechanical Installation	27
3.6 Package Contents and Installation	28
3.6.1 Installing the Switch in the Rack	28
3.6.2 Grounding the Switch	33
3.6.3 Power Connections and Initial Power On	33
3.6.4 Extracting and Inserting the Power Supply Unit	34
3.6.5 Splitting the Data Stream Using Breakout (Fanout) Cables	35
3.6.6 Cable Installation	37
3.6.7 Extracting and Inserting the Fan Unit	38
3.7 Switch Shut Down Procedure	39
3.8 Disassembly of the Switch from the Rack	40
3.9 Disposal	40
<b>Chapter 4 Management and Tools Overview</b>	<b>41</b>
4.1 Chassis Management Using the MLNX-OS™ Software	41
4.2 Configuring the Switch for the First Time	41
4.2.1 Starting a Remote Connection to the Switch	41
4.2.2 Upgrading Software	42
<b>Chapter 5 Troubleshooting</b>	<b>43</b>
<b>Appendix A Specification</b>	<b>46</b>
Approved Cables	47
EMC Certifications	47
<b>Appendix B Thermal Threshold Definitions</b>	<b>48</b>

<b>Appendix C Transferring the Power Cord</b>	<b>49</b>
<b>Appendix D QSFP Interface</b>	<b>51</b>
<b>Appendix E RJ-45 CONSOLE and Ethernet interfaces</b>	<b>53</b>
<b>Appendix F Replacement Parts Ordering Numbers</b>	<b>54</b>
<b>Appendix G Avertissements de sécurité d'installation (French)</b>	<b>55</b>
<b>Appendix H Installation - Sicherheitshinweise (German)</b>	<b>59</b>
<b>Appendix I Advertencias de seguridad para la instalación (Spanish)</b>	<b>63</b>

## List of Figures

Figure 1:	Connector Side View of the Switch	11
Figure 2:	Pull Out Tab	13
Figure 3:	QSFP Switch System Power and Connector Side Panels	15
Figure 4:	System Status Indicators	15
Figure 5:	Power, Fan, and System LEDs	16
Figure 6:	Port LEDs	17
Figure 7:	Power Side Panel	18
Figure 8:	PS Unit Status LEDs	18
Figure 9:	Fan Status LED Connector Side	19
Figure 10:	Fan Status LED Power side	19
Figure 11:	Bad Port LED	20
Figure 12:	Reset Button	21
Figure 13:	Port Numbering	23
Figure 14:	Top and Bottom Ports	23
Figure 15:	Management Interfaces	24
Figure 16:	Rack Rail Kit Parts	29
Figure 17:	Mounting Options	30
Figure 18:	Screwing on the Rail	31
Figure 19:	Inserting the Caged Nuts	31
Figure 20:	Slide the Rail into the Rail Slide	32
Figure 21:	Status LEDs 5 Minutes After Power On	32
Figure 22:	Two Power Inlets - Electric Caution Notifications	34
Figure 23:	Power Supply Unit Extraction	34
Figure 24:	PS Unit Pulled Out	35
Figure 25:	Breakout or Fanout Cable	36
Figure 26:	Port Splitting Options	36
Figure 27:	Top and Bottom Ports	38
Figure 28:	Air Flow Labels	39
Figure 29:	Fan Module Latches	39
Figure 30:	Host Connection	41
Figure 31:	Transfer Power Cord	49
Figure 32:	Put the Cord Through the Switch Slide Before Screwing it to the Switch	49
Figure 33:	Screw the Switch Slide to the Switch	50
Figure 34:	Transfer Power Cord Finished	50

Figure 35: QSFP Connector Male and Female Views

## List of Tables

Table 1:	Revision History Table	8
Table 2:	Reference Documents and Web Sites	9
Table 3:	System Status LED Configurations	17
Table 4:	Port Connector Physical and Logical Link Indications	17
Table 5:	PS Unit Status LED Configurations	18
Table 6:	Fan Status LED Configurations	19
Table 7:	Bad Port LED Configurations	20
Table 8:	Air Flow Direction	22
Table 9:	Installation Kit According to Rack Size	28
Table 10:	Port Splitting Options	37
Table 11:	SX103[56]Specification Data	46
Table 12:	InfiniBand QSFP Connector Pinout	51
Table 13:	RJ-45 Pinout	53
Table 14:	Replacement Parts Ordering Numbers	54

# Revision History

**Table 1 - Revision History Table**

Date	Revision	Description
February 2012	1.1	Added one OPN Added China RoHS to the parts list Added Appendix for Thermal Threshold Definitions Removed reference to spring clip in Appendix "Transferring the Power Cord" Changed Specifications table formatting 4 column to 2 column Fixed port LED assignment Added Cable Splitting section
July 2011	1.0	Initial Release



## About this Manual

This manual describes the installation and basic use of the Mellanox switch.

### Intended Audience

This manual is intended for users and system administrators responsible for installing and setting up the switch platforms listed above.

### Related Documentation

Additional Documentation available from Mellanox:

**Table 2 - Reference Documents and Web Sites**

Document Name	Description
<i>Switch Hardware Errata</i>	For any possible errata due to hardware issues see the switch support product page. This requires a customer support login.
<i>Mellanox MLNX-OS SwitchX Software WebUI User's Manual</i>	WebUI Overview for MLNX-OS software.
<i>Mellanox MLNX-OS SwitchX Software User Manual</i>	This document contains information regarding configuring and managing Mellanox Technologies' SwitchX Switch Platforms.
<i>MLNX-OS Software Command Reference Guide</i>	Command Reference Guide for MLNX-OS listing all of the commands available through MLNX-OS with explanations and examples.
<i>MLNX-OS Software Configuration Guide</i>	Configuration Guide for MLNX-OS displaying different configuration scenarios.

All of these documents can be found on the Mellanox Website. They are available either through the product pages or through the support page with a login and password.

### Conventions

Throughout this manual, the name SX10XX and the term switch are used to describe the 36-port QSFP 40Gb/s Ethernet Switch, unless explicitly indicated otherwise.

The following pictures are used throughout this document to indicate information that is important to the user.



This symbol makes recommendations to the user.



This symbol indicates information that is helpful to the user.



This symbol indicates a situation that can potentially cause damage to hardware or software.



**BEWARE!** This symbol indicates a situation that can potentially cause personal injury or damage to hardware or software.


## Mellanox Part Numbering Legend

Place	Field	Decoder
M		Mellanox Technologies
SX	System Type	SwitchX Switch
P	Data Transfer Protocol	1 = Ethernet
R	Size of box	0 = 1U 1 = 1.5U 2 = 2U
	40 Gb/s equivalent throughput	16 = 640Gb/s 36 = 2880 Gb/s
C	Data Rate	B = 40Gb/s Ethernet
-	Separator	
P	# Power Supplies	0=0, 1=1, 2=2....
M	Depth of the Unit	S = standard depth, B = short depth
Y	Air Flow direction	R= Connector side to Power side airflow F= Power Side side to Connector side airflow
X	RoHS	C=RoHS5, R=RoHS6

# 1 Overview

The SX10xx Ethernet system switch family provides the highest-performing fabric solution in a 1U form factor by delivering up to 2.88Tb/s of non-blocking throughput to High-Performance Computing (HPC), high frequency trading and Enterprise Data Centers (EDC), with ultra-low-latency. It has 36 40GbE ports that when connected to Mellanox NICs with Mellanox cables and adapters gives you the optimal end-to-end solution for Ethernet Data-Centers.

**Figure 1: Connector Side View of the Switch**

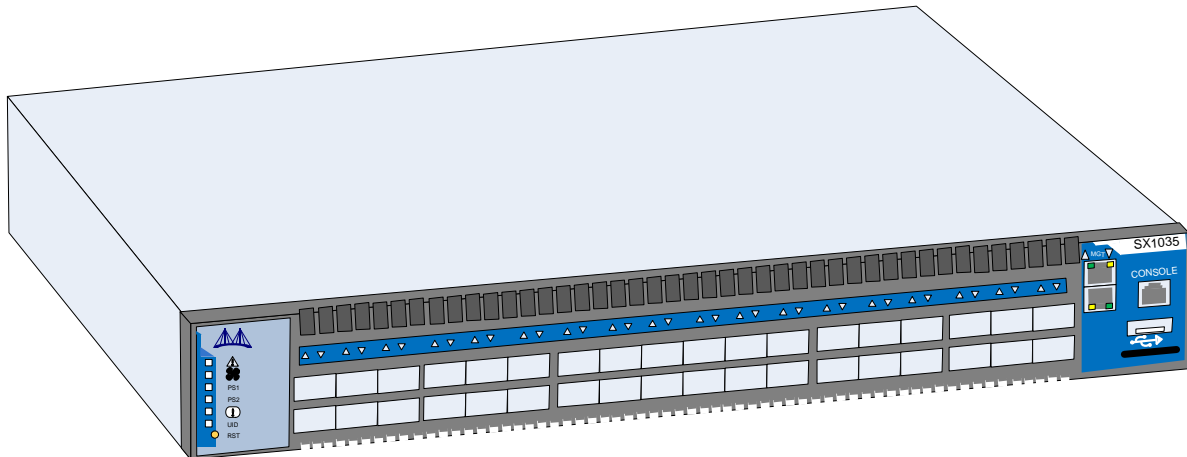

## 1.1 Features


### 1.1.1 Full Feature List

- DHCP
- Telnet
- SSHv2
- CLI
- FTP
- TFTP
- SCP
- Upload/download configuration
- Static MAC
- Syslog
- System alarms
- Auto temperature control
- Simple Network Time Protocol SNTP
- RADIUS
- TACACS+
- LDAP
- 802.1w RSTP
- 802.3x Flow Control
- 802.1Qab PFC
- 802.1Qaz - ETS
- Dual SW Image
- Familiar industry standard CLI

## 1.2 Serial Number and Product Version Information

The Serial number and the MAC for the switch are found on the pull out tab below the RJ-45 connectors. The MAC for the Management PC is also on this tab. This MAC is for one of the Ethernet RJ-45 management interfaces. The second interface has the next consecutive MAC.

Figure 2: Pull Out Tab

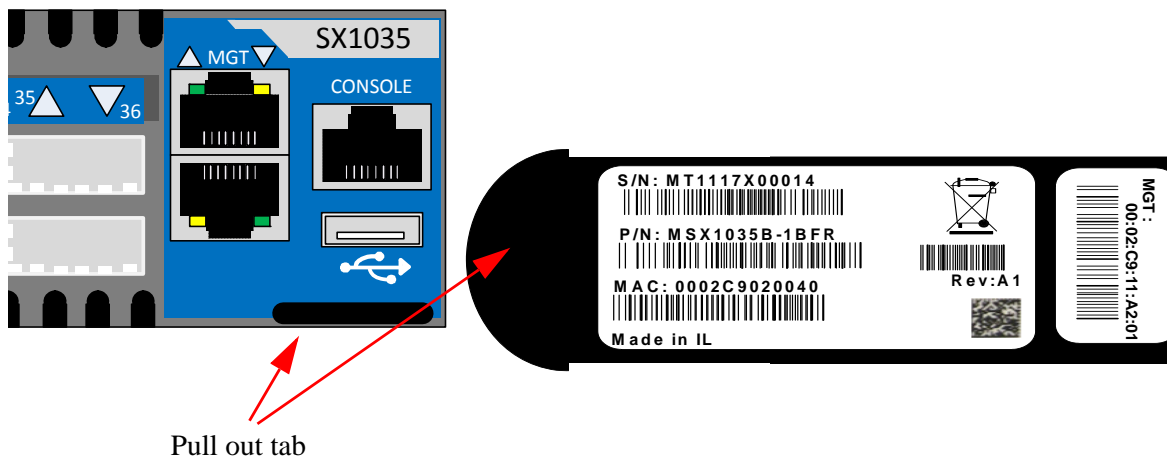


## 2 40 Gb/s Ethernet



40 GbE is only guaranteed to work with approved Mellanox Cables.

Each QSFP port is capable of up to 40Gb/s as well as 10Gb/s with a QSA QSFP to SFP+ adaptor or QSFP to SFP+ Mellanox cables.

The switch contains 36 ports of 40GbE. Each port can be connected with QSFP cables and connectors for 40Gb/s speed, or 10Gb/s speed when connecting through QSA Mellanox adaptors.


Specific ports can support breakout cables. See “Splitting the  Data Stream Using Breakout (Fanout) Cables” on page 35 for mor information.

# 3 Basic Operation and Installation

## 3.1 Switch Platform Hardware Overview

Figure 3 shows the power side panel and connector side panel views of the switch. The figure shows port configurations for the switch systems, the hot-swap power supply locations, the hot-swap fan module, 2 – Ethernet RJ-45 connectors for management, 1 – RJ-45 connector for connecting to a host PC, 1 – USB connector, and various status LEDs.

**Figure 3: QSFP Switch System Power and Connector Side Panels**

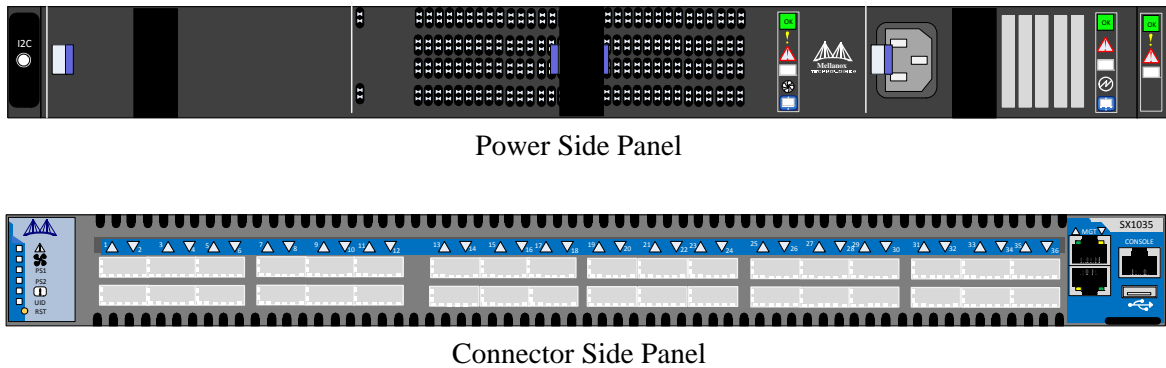


All connectivity except for power cords is via the connector side panel. All connectors can support active cables.

### 3.1.1 Status LEDs

#### 3.1.1.1 System Status Indicators

The System Status Indicators are located to the left of the connectors on the connector side panel, and on the power side at the far right. Both of these LEDs give identical information.

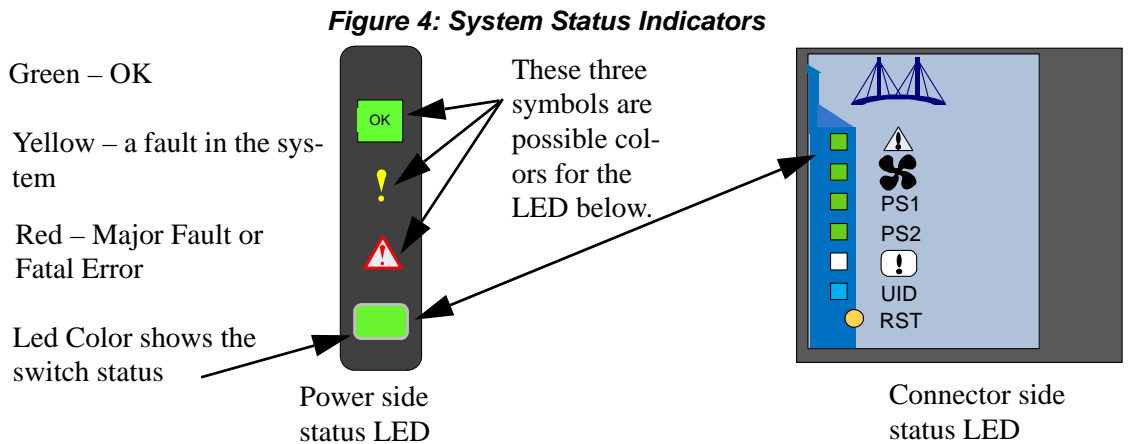

The system status indicators should display as follows:

- when the switch is plugged in, within five minutes the STATUS LED should light up green
- the PS1 LED for the plugged in PS unit should light up green
- the PS2 LED for the second PS unit should light up green only if a second PS unit is installed in the switch for redundancy and Hot-Swap ability and it is connected to a power source
  - if two PS units are installed and only one PS unit is connected to a power supply the PS2 LED will be red
  - if only one PS unit is installed in the switch, the PS2 LED will be off.
- the FAN LED should light up green



As long as there is power to the switch (one PS unit is connected), and the switch is booted up and running, the status LED should be green.



If the STATUS LED shows red after five minutes, unplug the switch and call your Mellanox representative for assistance.


If the FAN LED shows red, troubleshoot the fan module. See “Troubleshooting” on page 43.



If the switch shuts down due to over temperature, unplug the switch, wait 5 minutes and replug in the switch. For more information See “Troubleshooting” on page 43.

If the PS LEDs are not green, this indicates a problem with the power supplies. The switch is operational only if at least one of the PS LEDs is green.

**Figure 5: Power, Fan, and System LEDs**

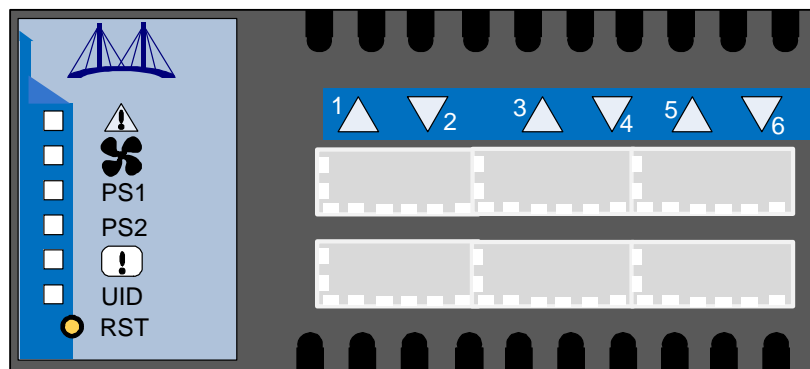




**Table 3 - System Status LED Configurations**

LED Configuration	STATUS/ System Health LED
Solid Green	OK – The system is up and running.
Flashing Green	The system is booting up.
Solid Yellow	Error – A fault in the system, most likely the firmware did not BOOT properly.
Solid Red	Major Error – Possible damage can result to the switch. Turn off immediately. e.g. bad firmware, can't boot, overheated
Off	Off – The system has no power.

### 3.1.1.2 Port Connector LED Indicators

Above the ports are two LEDs one for the upper port ▲ and one for the lower port ▼ . The following table shows the port status according to the LED indication.

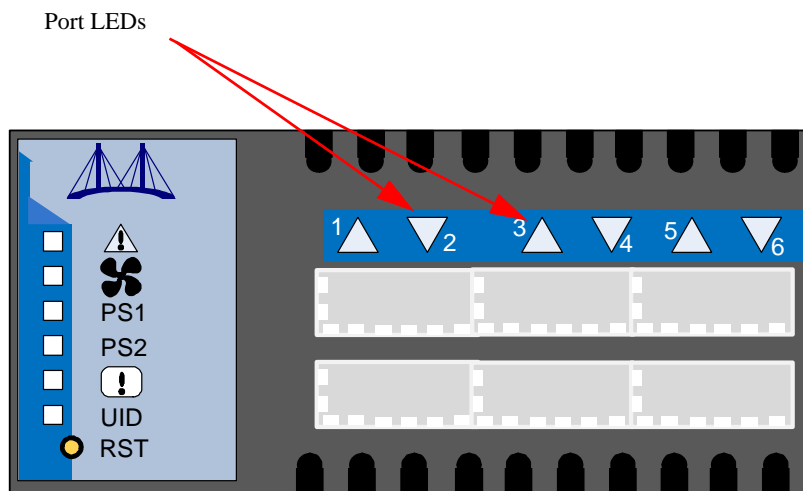
**Figure 6: Port LEDs****Table 4 - Port Connector Physical and Logical Link Indications**

LED Configuration	LED Description
Off	Physical link down / Default
Solid Green	Physical link up no traffic
Flashing Green	Physical link up with traffic
Flashing Orange	Physical errors

### 3.1.1.3 Power Supply Status Indicators


The SX10XX switch is available with one factory installed Power Supply Unit. A second Power Supply Unit can be added to support hot-swap ability and to add redundancy. See Section F, “Replacement Parts Ordering Numbers,” on page 54 for ordering part numbers.

**Figure 7: Power Side Panel**

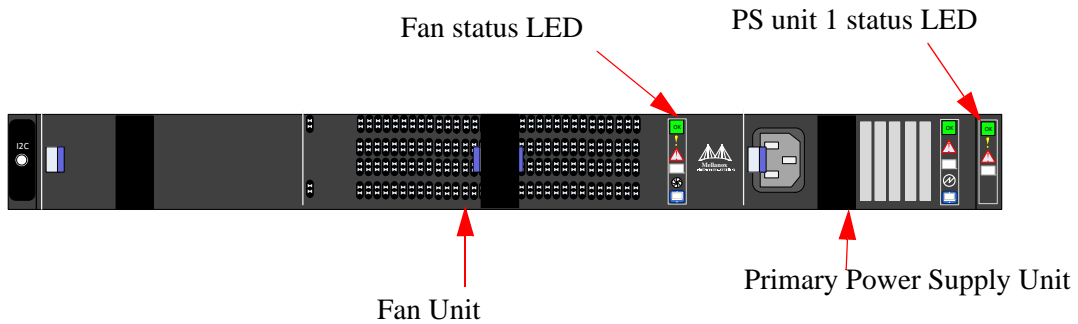

The primary power supply unit (PS1) is located on the right side of the power side panel, with PS2 on the left side. Each PS unit has a single 2 color LED on the right side of the PS unit, that indicates the internal status of the unit.

**Figure 8: PS Unit Status LEDs**

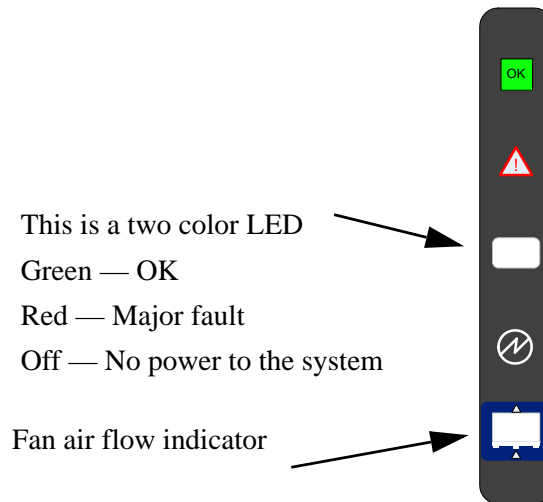

This is a two color LED  
 Green — OK  
 Red — Major fault  
 Off — No power to the system

Fan air flow indicator


**Table 5 - PS Unit Status LED Configurations**

LED Color	Status
Solid Green	OK – The Power supply is delivering the correct voltage – 12VDC
Solid Red	Error – The PS unit is not operational
Off	Off – There is no power to the system (neither PS unit is receiving power). If one PS unit is showing green and the second PS unit is unplugged it will show a red indication.

### 3.1.1.4 Fan Status Indicators


The indicator is located to the left of the connectors on the connector side panel.

**Figure 9: Fan Status LED Connector Side**

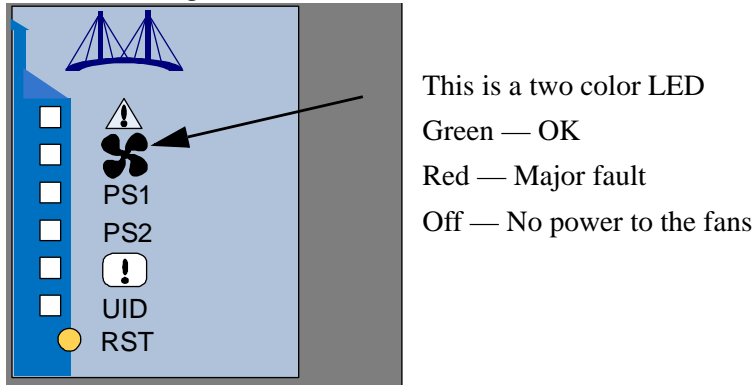

The LED indicator on the Fan Module is on the right side of the module.

**Figure 10: Fan Status LED Power side**

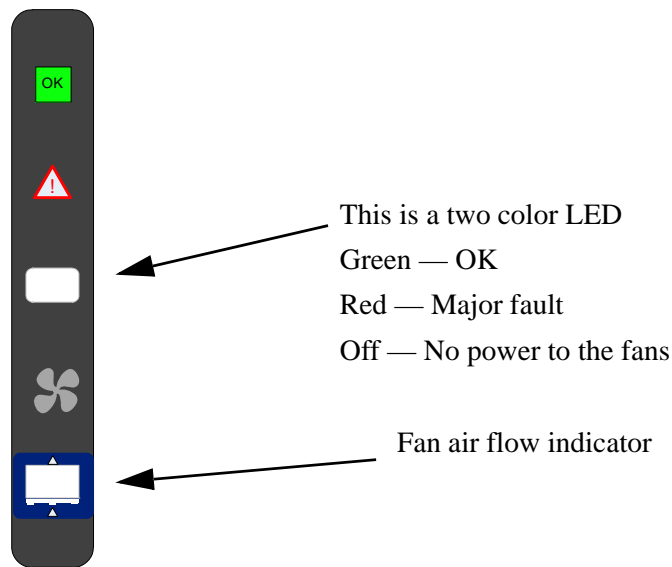

The following fan status conditions are possible:

**Table 6 - Fan Status LED Configurations**

LED Configuration	FAN LED
Solid Green	OK – All fans are up and running

**Table 6 - Fan Status LED Configurations**

LED Configuration	FAN LED
Solid Red	Error – One or more fans is not operating properly. The system should be powered down and troubleshoot the fan module.
Off	Off – The fan unit is not receiving any power. Check that the fan unit is properly and completely inserted.




All fans must be operating while the power supply is plugged in.



If the switch shuts down due to over temperature, unplug the switch, wait 5 minutes and replug in the switch. For more information See “Troubleshooting” on page 43.

**3.1.1.5 Bad Port LED** 

**Figure 11: Bad Port LED**

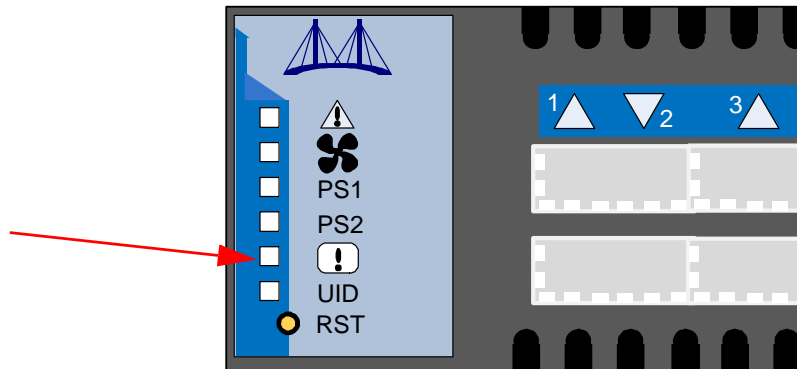

The Bad Port indicator is located on the left side of the connector side panel of the unit. The following Bad Port conditions are possible.

**Table 7 - Bad Port LED Configurations**

LED Configuration	Description
Off	OK – All ports are up and running
Flashing Orange	Error –One or possibly more ports has just received a symbol error

This LED shows symbol errors. Possible causes for this are:

- bad cable
- bad connection

- bad connector

This LED lights up when one or more ports is receiving a symbol error. The LED immediately goes off until the next symbol error is received.

### 3.1.1.6 UID LED Switch Identifier UID

The UID LED is a debug feature that will become available to customers in the near future. For details please contact Mellanox Technologies support.

## 3.1.2 Reset Button


On the connector side panel under the system LEDs is a reset button. This reset button requires a tool to be pressed.



DO NOT use a sharp pointed object such as needle or push pin for pressing the Reset button. Sharp objects can cause damage, use a flat object to push the reset button.

**Figure 12: Reset Button**

Press the reset button to reset the main and management CPUs and to delete the existing password.

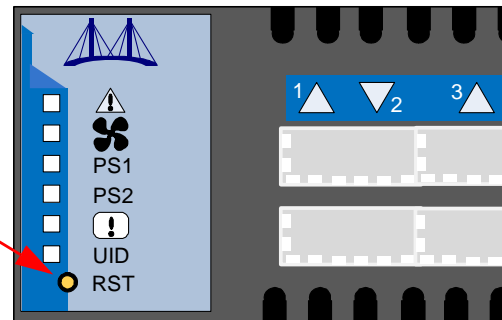

This button resets both the CPU of the switch device and the CPU of the management module. It thereby resets all of the ports by bringing them down and powering them up when the button is pushed. A quick push of this button performs this reset. When the button is held down for 15 seconds the switch is reset and the password is deleted. You will then be able to enter without a password and make a new password for the user “*admin*”.

## 3.2 Air Flow

These switches can come with two air flow patterns. The two patterns are:

- connector side inlet to power side outlet
- power side inlet to connector side outlet

The air flow is specified in the product model number. See “Mellanox Part Numbering Legend” on page 10. On the PS unit and fan modules the air flow direction can be seen on the power side panel.



All PS units must have the same air flow as the fan module.

**Table 8 - Air Flow Direction**

Direction	Label	OPN Designation	Description
		R	Connector side inlet to power side outlet
		F	Power side inlet to connector side outlet

### 3.3 QSFP Cable Power Budget Classification

All SwitchX QSFP switches are designed for active cables with a max power per module of 2W. Typical power per port is 1.3W.


## 3.4 Interfaces

### 3.4.1 Port Connector Interfaces

#### 3.4.1.1 36 Port Switches


The connector side of the switch has 36 QSFP ports. These are placed in two rows, 18 ports to a row. The ports are labelled as shown in Figure 13. The bottom row ports are flipped from the top row. See Figure 14 for bottom row - top row port orientation.

**Figure 13: Port Numbering**

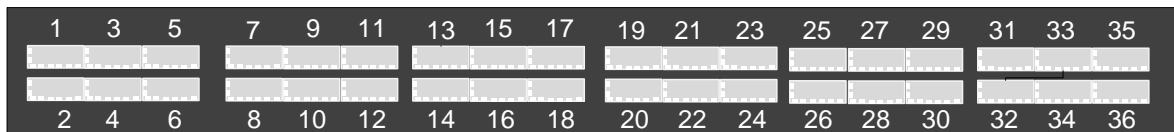



#### 3.4.1.2 Top and Bottom Orientation

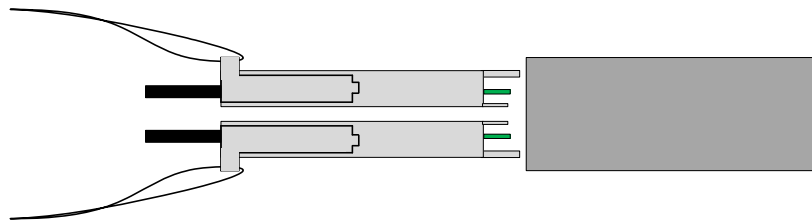
**Figure 14: Top and Bottom Ports**



### 3.4.2 Management and Firmware Updating Interfaces

There are five interfaces to connect to the SX103X:

- 2 X 100M/1Gb Ethernet connectors labelled “MGT”
- 1 USB port that is labelled   
This interface can be used to update software or firmware.
- 1 connector that is labelled “CONSOLE”  
Use this connector to connect to the host PC.
- 1 I2C banana connector on the power supply side for FAE use only 

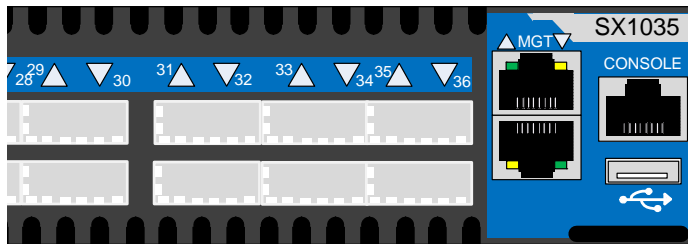**Figure 15: Management Interfaces**

### 3.4.2.1 RJ-45 Connector (CONSOLE)

The port labelled “CONSOLE” is for a local host connection to the management module. This is used the first time the switch is connected. A harness is included in the package to connect to a DB9 connection on a host PC. Connecting to a local host PC and following the instructions in the Installation Guide, “Configuring the Switch for the First Time”, must be done before any remote management is available. For the Socket pinout see “RJ-45 CONSOLE and Ethernet interfaces” on page 53.

### 3.4.2.2 RJ-45 Ethernet Connector (MGT)

The Ethernet connection labelled “MGT” provides access for remote management. The switch can be connected to any Ethernet port.



Each Ethernet connector gets connected to Ethernet switches. These switches must be configured to 100M/1G auto-negotiation.

### 3.4.2.3 USB interface



The USB interface can be used to update the MLNX-OS™ Web User Interface (WebUI) or MLNX-OS Command Line Interface (CLI).

There is a single USB connector. This connector can be used to install software and or firmware upgrades using a memory device that has a USB connector. This connector is USB 2.0 compliant.

### 3.4.2.4 I2C Interface

There is an I2C connector on the far left of the power side of the switch. **This interface is for Debug and Troubleshooting only.** This connector can be used to install firmware upgrades, should the firmware image be damaged and cannot be upgraded through a host PC or remotely. This interface is for support personnel and advanced users only.



## 3.5 Switch Platform Installation and Operation

Installation and initialization of the switch platform are straightforward processes, requiring attention to the normal mechanical, power, and thermal precautions for rack-mounted equipment.

### 3.5.1 Installation Safety Warnings

For Safety Warnings in French see Section G, “Avertissements de sécurité d’installation (French),” on page 55, for German see Section H, “Installation - Sicherheitshinweise (German),” on page 59, and for Spanish see Section I, “Advertencias de seguridad para la instalación (Spanish),” on page 63.

#### 1. Installation Instructions



Read all installation instructions before connecting the equipment to the power source.

#### 2. Over-temperature



This equipment should not be operated in an area with an ambient temperature exceeding the maximum recommended: 45°C (113°F). Moreover, to guarantee proper air flow, allow at least 8cm (3 inches) of clearance around the ventilation openings.

#### 3. Stacking the Chassis



The chassis should not be stacked on any other equipment. If the chassis falls, it can cause bodily injury and equipment damage.

#### 4. Redundant Power Supply Connection - Electrical Hazard



This product includes a blank cover over the space for the redundant power supply. Do not operate the product if the blank cover is not securely fastened or if it is removed.

#### 5. During Lightning - Electrical Hazard



During periods of lightning activity, do not work on the equipment or connect or disconnect cables.

## 6. Copper Cable Connecting/Disconnecting



Copper cables are heavy and not flexible, as such they should be carefully attached to or detached from the connectors. Refer to the cable manufacturer for special warnings and instructions.

## 7. Rack Mounting and Servicing



When this product is mounted or serviced in a rack, special precautions must be taken to ensure that the system remains stable. In general you should fill the rack with equipment starting from the bottom to the top.

## 8. Equipment Installation



This equipment should be installed, replaced, or serviced only by trained and qualified personnel.

## 9. Equipment Disposal



Disposal of this equipment should be in accordance to all national laws and regulations.

## 10. Local and National Electrical Codes



This equipment should be installed in compliance with local and national electrical codes.

## 11. Hazardous Radiation Exposure



Caution – Use of controls or adjustment or performance of procedures other than those specified herein may result in hazardous radiation exposure.




CLASS 1 LASER PRODUCT and reference to the most recent laser standards:  
IEC 60 825-1:1993 + A1:1997 + A2:2001 and EN 60825-1:1994+A1:1996+ A2:2001

## 12. UL Approved AC Power Cords




For North American power connection, select a power supply cord that is UL Listed and CSA Certified  
3 - conductor, [18 AWG], terminated in a molded on plug cap rated at 125 V, [15 A], with a minimum length of 1.5m [six feet] but no longer than 4.5m  
For European connection, select a power supply cord that is internationally harmonized and marked “<HAR>”,  
3 - conductor, minimum 0,75 mm<sup>2</sup> wire, rated at 300 V, with a PVC insulated jacket.  
The cord must have a molded on plug cap rated 250 V, 10 A.

## 13. Do Not Use the Switch as a Shelf or Work Space.

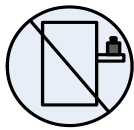

Caution: Slide/rail mounted equipment is not to be used as a shelf or a work space.

## 14. WEEE Directive

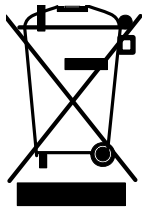

According to the WEEE Directive 2002/96/EC, all waste electrical and electronic equipment (EEE) should be collected separately and not disposed of with regular household waste.

Dispose of this product and all of its parts in a responsible and environmentally friendly way.

### 3.5.2 Mechanical Installation

The switch platform can be rack mounted and is designed for installation in a standard 19” rack. The power side of the switch includes a hot-swap power supply module, a blank cover for an optional second PS unit for redundancy, and a hot-swap fan tray. There are two possible air flow directions. Be sure that the switch air flow direction is compatible with your system, rack, and PS units. The connector side of the switch has the QSFP ports, system LEDs, and management connection ports.

The switch platform contains auto-sensing 100 - 240 VAC connections for all possible PS units.

The installer should use a rack capable of supporting the mechanical and environmental characteristics of a fully populated platform.



The rack mounting holes conform to the EIA-310 standard for 19-inch racks. Take precautions to guarantee proper ventilation in order to maintain good airflow at ambient temperature. Cable routing in particular should not impede the air exhaust from the chassis.

### 3.5.2.1 Installation Kits

There are two Installation kit options. One long and one short. Both the long and the short switches can be mounted using the long rail kit.

**Table 9 - Installation Kit According to Rack Size**

Kit OPN	Rack Size
MSX60-BKIT	40-60 cm
MSX60-SKIT	60-80 cm

## 3.6 Package Contents and Installation

Before you install your new SX10XX switch, unpack the system and check to make sure that all the parts have been sent, check this against the parts list below. Check the parts for visible damage that may have occurred during shipping.

The switch comes packed with the following items:

- 1 X – switch
- 1 X – installation kit
- 1 X – power cable for each PS unit – Type B 6ft US 125V 10A cord
  - See “Replacement Parts Ordering Numbers” on page 54 to order power cords for various countries
  - a single power cord for each power supply unit can be ordered at no extra charge
- 1 X – Harness
  - HAR000028 – Harness RS232 2M cable – DB9 to RJ-45
- 1 X – Quick Start Guide
- 1 X – China RoHS statement



If anything is damaged or missing, contact your customer representative immediately. For customer support go to: [www.mellanox.com](http://www.mellanox.com) =>Support => Customer Support Portal Login

### 3.6.1 Installing the Switch in the Rack

Tools and Customer Supplied Parts


- Phillips Screwdrivers #1 and #2
- ESD strap
- ESD mat
- grounding screw
- grounding wire sufficient to reach a valid ground.

For racks from 60cm to 80cm deep either use the standard depth switches with the long rail kit or the short switches with the long rail kit.

Parts included in the rail kit:

- 2 rails
- 2 rail slides
- 2 switch slides
- 16 recessed flat head screws You will have extras!
- 10 caged nuts
- 10 pan head screws M6

**Figure 16: Rack Rail Kit Parts**

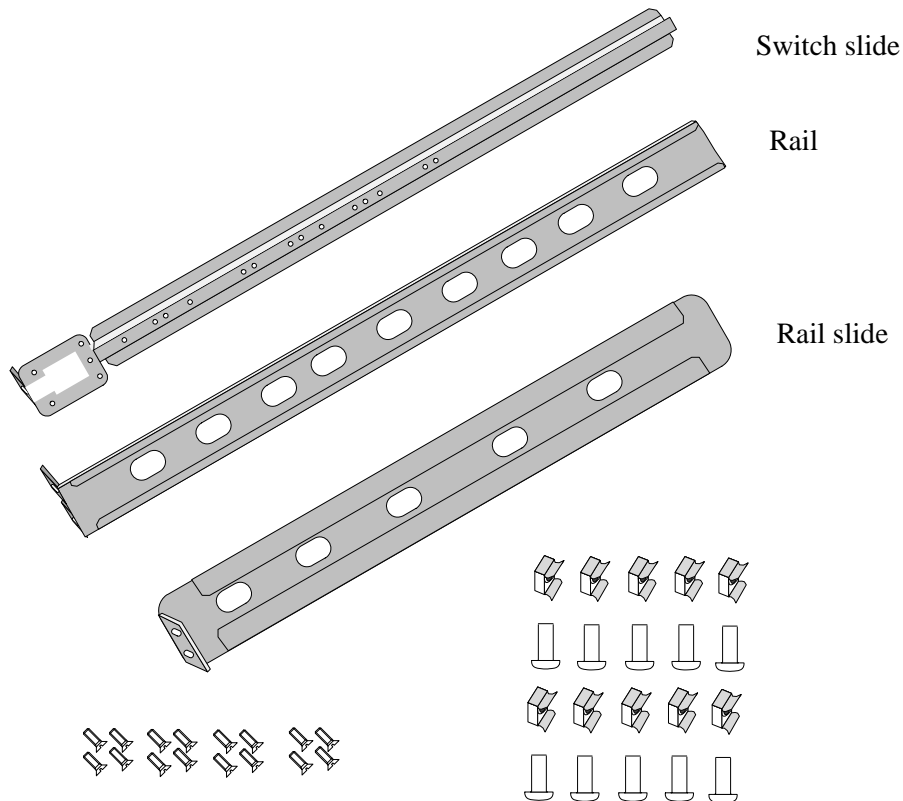

1. Place the ESD mat on the floor where you will be working and put on the ESD strap. Make sure the ESD strap is touching your skin and that the other end is connected to a verified ground.
2. Choose which side of the switch you want even with the rack vertical support. Either the side with the power supply units or the side with the QSFP connectors can be even with one of the vertical rack supports.


Things to consider before choosing where to mount the rails and rail slides.

The distance between the rack and the door can be as little as 4 cm on one side of the rack and as much as 18 cm on the other side of the rack. Keep in mind that there can be as many as 36 cables connected to the switch.

- Do you want the connector side recessed in the rack to allow for a larger cable bending radius? It is possible to recess the connector side by 5cm by optional placement of the switch rails. See Figure 17, "Mounting Options".
- Will the connector side be recessed past other equipment in the rack and will this be problematic?

- The installation kit allows for a 2” recess of the switch past the vertical support.

**Figure 17: Mounting Options**


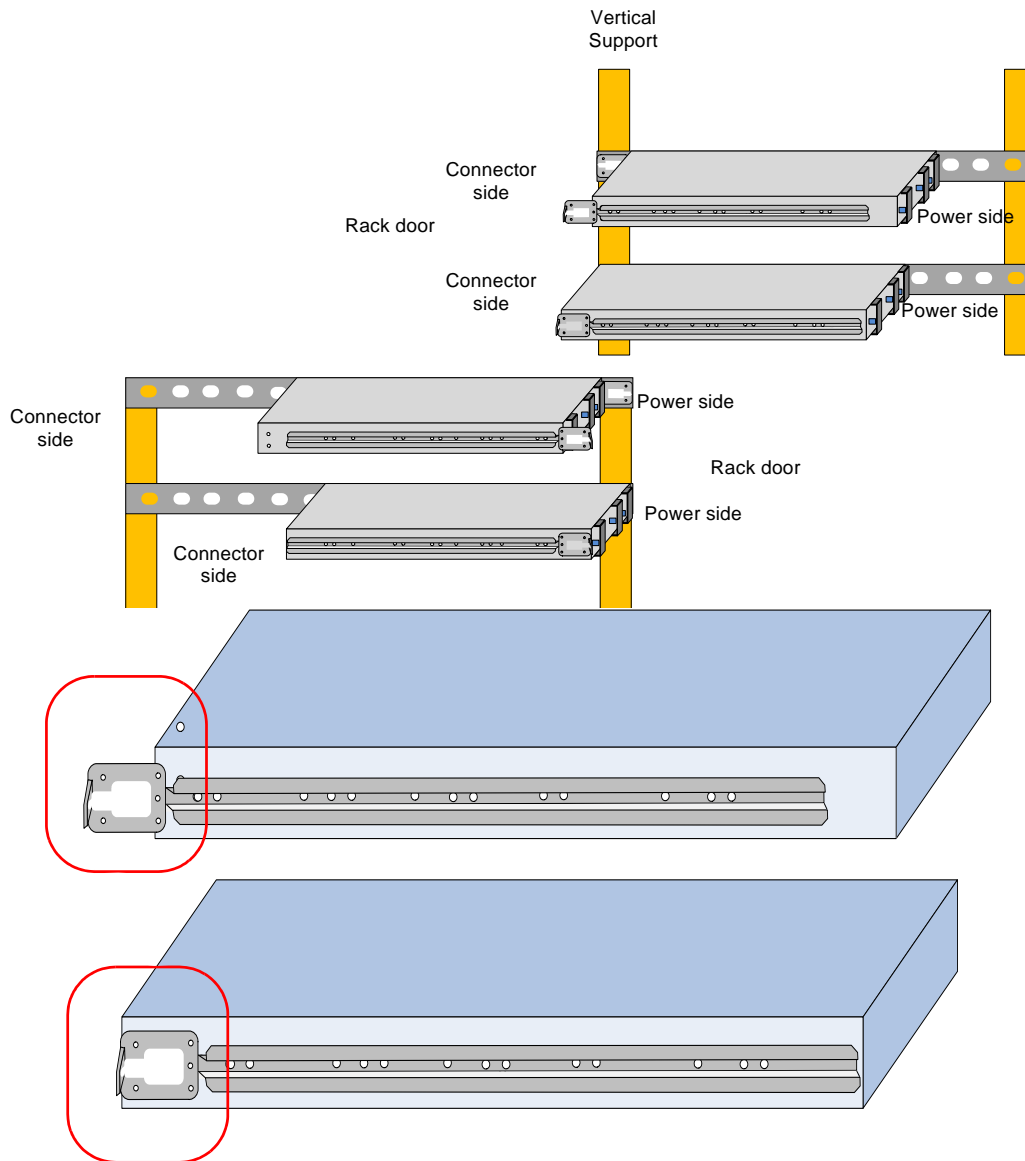


3. Decide which mounting option you want to use.




To use the rail kit to transfer the power cord from the connector side to the power side go now to **“Transferring the Power Cord”** on page 49.

4. Screw the switch slides onto the switch. Use 5 flat head screws for short switches and 7 screws for standard depth switches, to connect each switch slide.

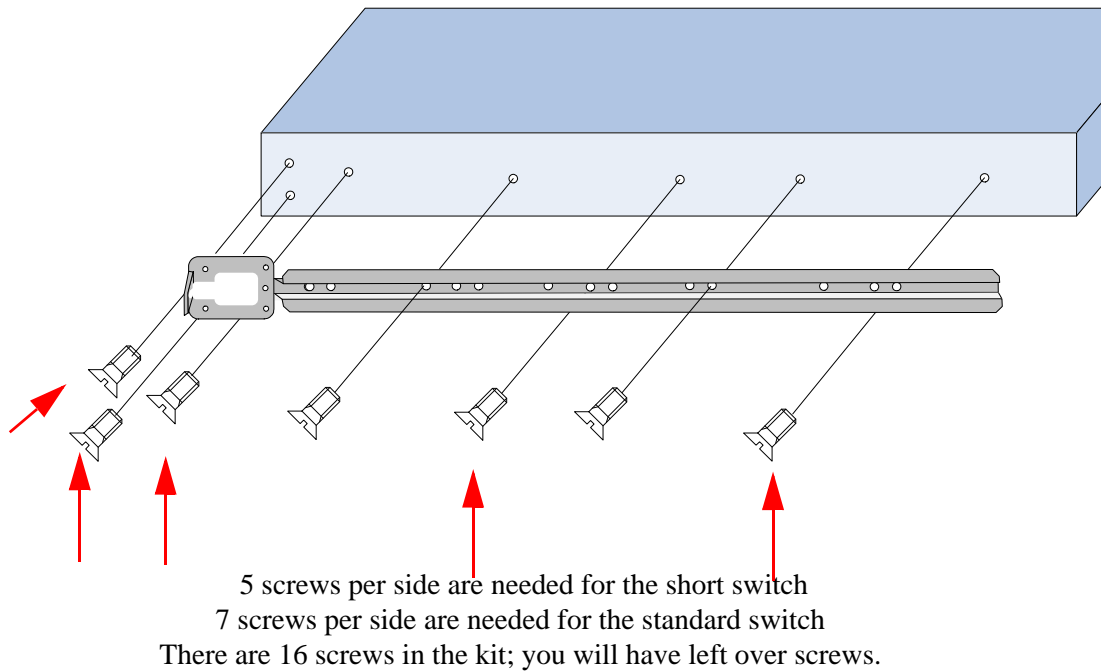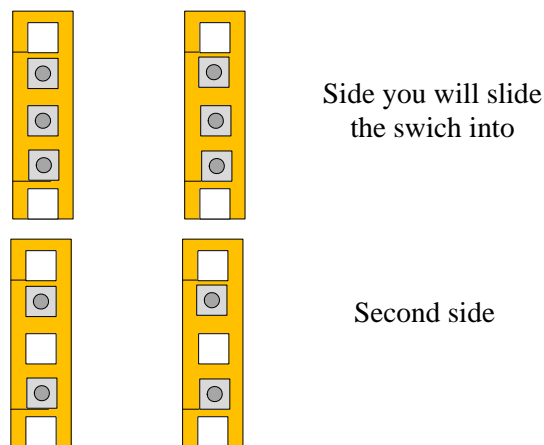
**Figure 18: Screwing on the Rail****Figure 19: Inserting the Caged Nuts**

5. Clip 6 caged nuts into the holes in the rack on the side of the rack you will be sliding the switch into. Check that both sides of the switch, power side and connector side, are at the same level in the rack.
6. Clip 4 more caged nuts into the holes on the opposite side of the rack. Check that both sides of the switch, left and right, are the same level in the rack.
7. Slide the rail into the rail slide.
8. Using two of the bolts for each corner install the rails and rail slides in the rack. Do not tighten the bolts yet.

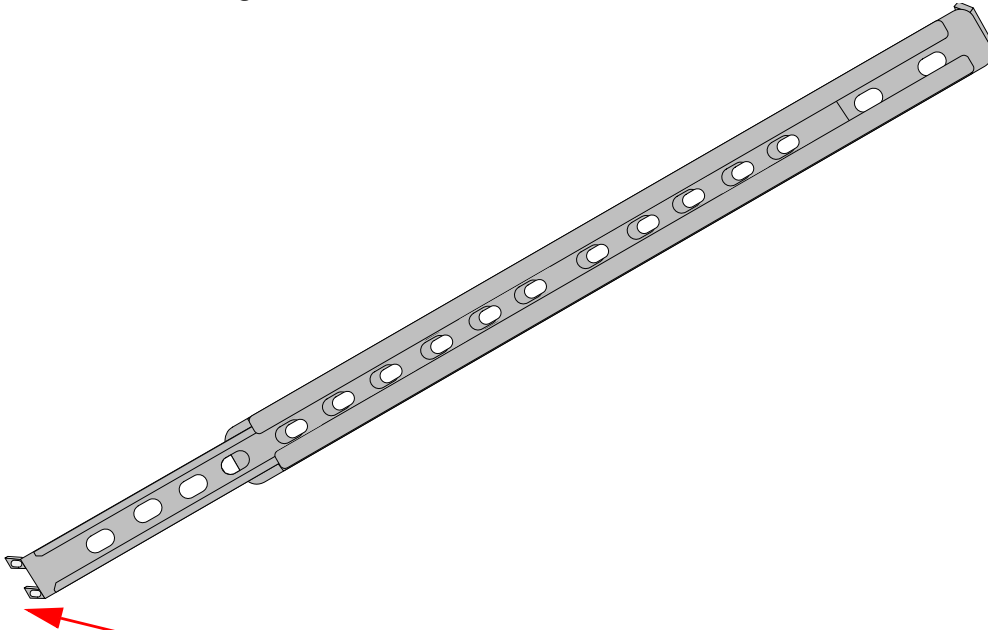**Figure 20: Slide the Rail into the Rail Slide**

This side of the rail kit goes on the side of the rack you will slide the switch into. This is the same side of the switch that will be next to the vertical support.

9. Slide the switch into the rails.
10. Tighten the bolts to 9.2 Nm or 81.5 pound inches.
11. Put the switch into place and screw the bolts into the nuts. Tighten the bolts to 9.2 Nm or 81.5 pound inches.
12. Ground the switch.
13. Plug in the power cables.
14. Check the Status LEDs and confirm that all of the LEDs show status lights consistent with normal operation.

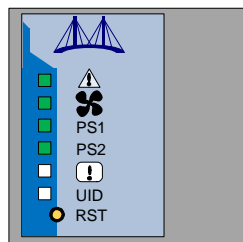**Figure 21: Status LEDs 5 Minutes After Power On**

**Warning:** Any yellow or red status LEDs are cause for concern and must be dealt with immediately.

It can take up to 5 minutes to boot up, during which time the status LED may indicate red.



15. You can start connecting all of the cables to the switch.

### 3.6.2 Grounding the Switch

Check to determine if your local or national electrical codes require an external ground to all IT components. If so, connect a ground wire to one of the casing screws and connect the other end to a valid ground. If you choose to not use the ground screw, make sure that the rack is properly grounded and that there is a valid ground connection between the chassis of the switch and the rack. Test the ground using an Ohm meter.



Some national and/or local codes may require IT components to be bonded and externally grounded (not including the power cord ground). You must follow all national and local codes when installing this equipment.

### 3.6.3 Power Connections and Initial Power On

The switch platform ships with one or two Power Supply Units. For switches with only one unit installed, a second PS unit may be installed at a later time. Each supply has a separate AC receptacle. The input voltage is auto-adjusting for 100 - 240 VAC, 50-60Hz power connections. The power cords should be standard 3-wire AC power cords including a safety ground and rated for 15A or higher.



Caution: The switch platform will automatically power on when AC power is applied. There is no power switch. Check all boards, power supplies, and fan tray modules for proper insertion before plugging in a power cable.



Caution: After inserting a power cable and confirming the green system status LED light is on; make sure that the Fan Status indicator shows green. If the fan status indicator is not green then unplug the power connection and check that the fan module is inserted properly and that the mating connector of the fan unit is free of any dirt and/or obstacles.



Caution: When turning off the switch, make sure ALL Connector LEDs are off to ensure a powered down status.



Do not hot swap the power supply if your switch has only one power supply. You must power down the system to replace the power supply unit when there is only one PS unit in the switch.

**Figure 22: Two Power Inlets - Electric Caution Notifications**

**CAUTION**

Risk of electric shock and energy hazard. The two PS units are independent.

Disconnect all power supplies to ensure a powered down state inside of the switch platform.

**ACHTUNG**

Gefahr des elektrischen Schocks. Entfernen des Netzsteckers eines Netzteils spannungsfrei. Um alle Einheiten spannungsfrei zu machen sind die Netzstecker aller Netzteile zu entfernen

**ATTENTION**

Risque de choc et de danger électriques. Le débranchement d'une seule alimentation stabilisée ne débranch uniquement qu'un module "Alimentation Stabilisée". Pour isoler complètement le module en cause, Il faut débrancher toutes les alimentations stabilisées.

### 3.6.4 Extracting and Inserting the Power Supply Unit

With both power supplies installed in the redundant configuration, either PS unit may be extracted without bringing down the system.




Make sure that the PS unit that you are NOT replacing is showing all green, for both the PS unit and status indicators.




Power supply units have directional air flows similar to the fan module. The Fan module airflow must coincide with the airflow of all of the PS units. If the PS unit airflow direction is different from the fan module airflow direction the switch internal temperature will be affected.

**Figure 23: Power Supply Unit Extraction**

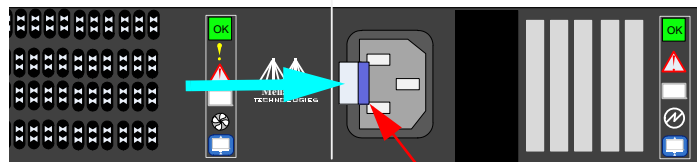

Latch Release

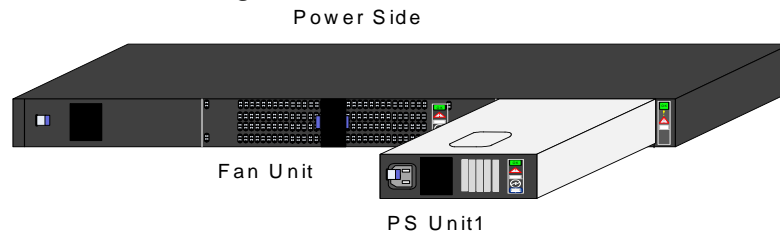**Figure 24: PS Unit Pulled Out**

To extract a PS unit:

1. Remove the power cord from the power supply unit.
2. Grasping the handle with your right hand, push the latch release with your thumb while pulling the handle outward. As the PS unit unseats, the PS unit status indicators will turn off.
3. Remove the PS unit.

To insert a PS unit:

1. Make sure the mating connector of the new unit is free of any dirt and/or obstacles.



Do not attempt to insert a PS unit with a power cord connected to it.

2. Insert the PS unit by sliding it into the opening until a slight resistance is felt.
3. Continue pressing the PS unit until it seats completely. The latch will snap into place confirming the proper installation.
4. Insert the power cord into the supply connector.
5. Insert the other end of the power cord into an outlet of the correct voltage.





The green PS unit indicator should light. If not, repeat the whole procedure to extract the PS unit and re-insert it.

6. For a list of approved cables for this switch see [www.mellanox.com/related-docs/user\\_manuals/Mellanox\\_approved\\_cables.pdf](http://www.mellanox.com/related-docs/user_manuals/Mellanox_approved_cables.pdf).

### 3.6.5 Splitting the Data Stream Using Breakout (Fanout) Cables

Specific ports out of the 36 ports can be split by using a QSFP 1X4 breakout cable to split one 40 Gb/s port into 4 lanes (4 SFP+ connectors). These 4 lanes then go, one lane to each of the 4 SFP+ connectors. Some ports can be split into 2 10 Gb/s ports, using lanes 1 and 2 only. When a QSFP port is split into 2 10Gb/s ports then only SFP+ connectors #1 and #2 are used. Connectors #3 and #4 are left unconnected. Using Figure 26 and Table 10, with breakout cables you can achieve 64 ports of 10Gb/s.

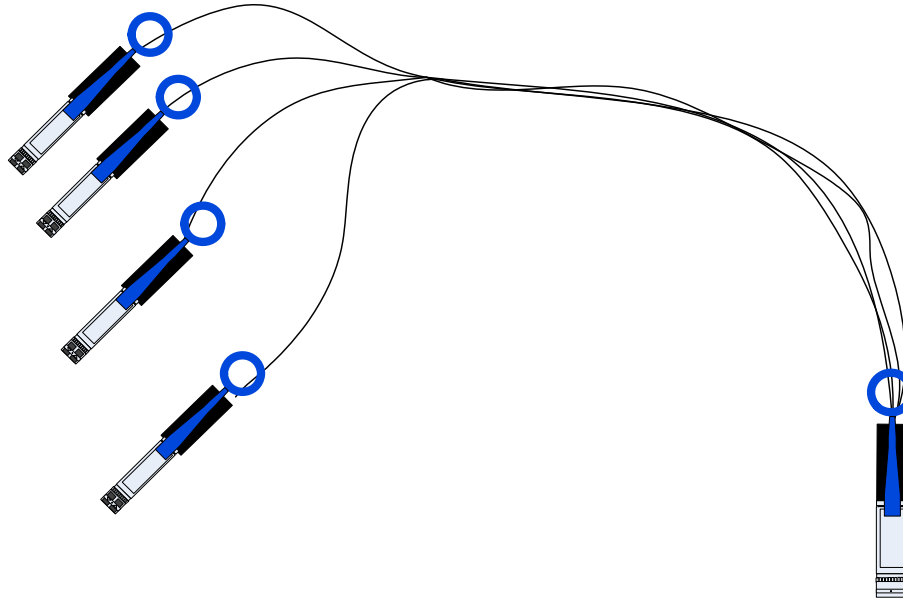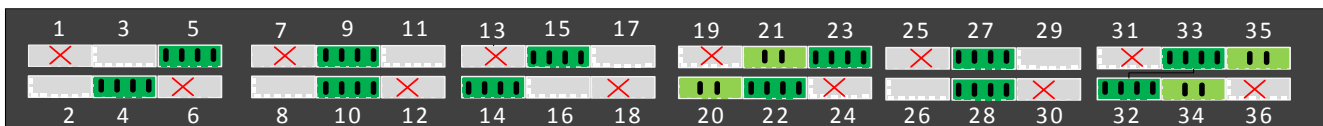**Figure 25: Breakout or Fanout Cable****Figure 26: Port Splitting Options**

|||| This port can be split into 4 10Gb/s SFP+

|| This port can be split into 2 10Gb/s SFP+

The maximum 10 Gb/s Ethernet ports configurable with this switch is 64.

When using a port to split a data stream into 4-10Gb/s data streams (four lanes) one of the other ports on the switch will be disabled (unmapped). See Table 10 to determine:

- which ports can be split into 4
- which ports can be split into 2
- which ports will be unmapped due to a 1X4 split

When using this feature you **MUST** go into the MLNX-OS chassis management system and reconfigure the individual ports to split-2 or split-4. See the MLNX-OS CLI User Manual for instructions on port configuration.

**Table 10 - Port Splitting Options**

Port #	Can be split to 4	Turns off port #	Can be split to 2	Port #	Can be split to 4	Turns off port #	Can be split to 2
1	—		—	19	—		
2	—		—	20	—		✓
3	—		—	21	—		✓
4	✓	1	—	22	✓	19	—
5	✓	6	—	23	✓	24	—
6	—		—	24	—		—
7	—		—	25	—		—
8	—		—	26	—		—
9	✓	12	—	27	✓	30	—
10	✓	7	—	28	✓	25	—
11	—		—	29	—		—
12	—		—	30	—		—
13	—		—	31	—		—
14	✓	13	—	32	✓	31	—
15	✓	18	—	33	✓	36	—
16	—		—	34	—		✓
17	—		—	35	—		✓
18	—		—	36	—		—

### 3.6.6 Cable Installation


All cables can be inserted or removed with the unit powered on. To insert a cable, press the connector into the port receptacle until the connector is firmly seated. The LED indicator, corresponding to each data port, will light when the physical connection is established (that is, when the unit is powered on and a cable is plugged into the port with the other end of the connector plugged into a functioning port). After plugging in a cable, lock the connector using the latching mechanism

particular to the cable vendor. When a logical connection is made the LED will change to green. When data is being transferred the light will blink green.



Cables in the bottom row should be inserted upside down in relation to how the cables are inserted in the top row.

**Figure 27: Top and Bottom Ports**

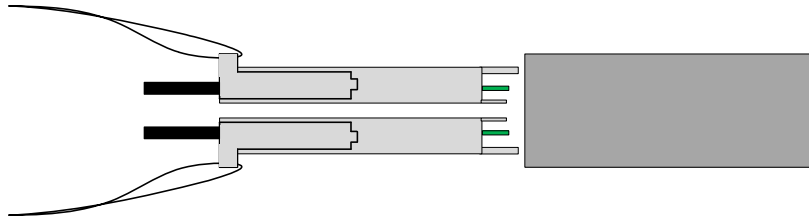

To remove, disengage the locks and slowly pull the connector away from the port receptacle. The LED indicator for that port will turn off when the cable is unseated.

Care should be taken not to impede the air exhaust flow through the ventilation holes next to the connector ports. Cable lengths should be used which allow for routing horizontally around to the side of the chassis before bending upward or downward in the rack.

### 3.6.7 Extracting and Inserting the Fan Unit

This switch can operate indefinitely with one of the three fans in the fan module inoperable so long as the ambient temperature is below 45° Celsius.




Operation without a fan unit should not exceed two minutes.  
During fan hot-swap, if both indicators are OFF then the fan unit is disconnected.

There are two possible air flows for the fan unit. The air flow depends on the switch model. See “Air Flow” on page 21 for an explanation of the model numbers and labels.




Make sure that the fans have the air flow that matches the model number. An air flow opposite to the switch design will cause the switch to operate at a higher (less than optimal) temperature.

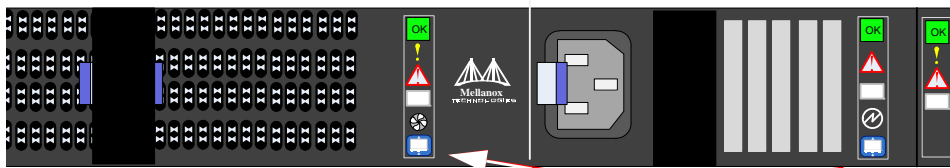**Figure 28: Air Flow Labels**

These air flow labels must be the same

To extract a Fan Unit

1. Using two fingers, push both latch releases towards each other simultaneously while pulling the fan module out of the switch. As the fan unseats, the fan status indicator will turn off.

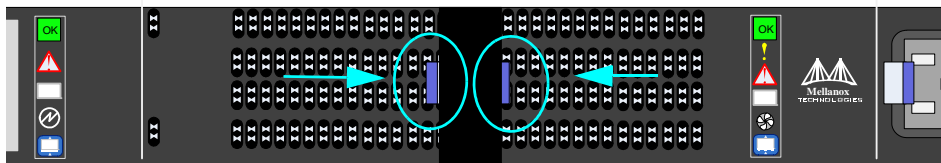**Figure 29: Fan Module Latches**

These two latches must be pushed towards each other at the same time while the module is pulled out.

To insert a FAN Unit:

1. Make sure the mating connector of the new unit is free of any dirt and/or obstacles.
2. Insert the fan unit by sliding it into the opening until slight resistance is felt. Continue pressing the fan unit until it seats completely.



The green fan status indicator should light. If not, extract the fan unit and reinsert it. After two unsuccessful attempts to install the fan unit, power off the switch before attempting any system debug.

### 3.7 Switch Shut Down Procedure

To shut down the switch run the command:

```
Reload halt [noconfirm]
```



**The switch cannot be restarted remotely!**

To restart the switch you must physically go to the switch and unplug and plug in the power cord.

### 3.8 Disassembly of the Switch from the Rack

To disassemble the switch from the rack:


1. Unplug and remove all connectors.
2. Unplug all power cords.
3. Remove the ground wire.
4. Unscrew the 2 bolts from the side of the switch with the bracket.



Support the weight of the switch when you remove the screws so that the switch does not fall.

5. Slide the switch from the rack.
6. Remove the rail slides from the rack.
7. Remove the ten caged nuts.

### 3.9 Disposal

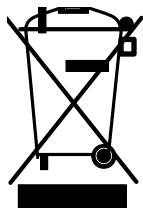

According to the WEEE Directive 2002/96/EC, all waste electrical and electronic equipment (EEE) should be collected separately and not disposed of with regular household waste.

Dispose of this product and all of its parts in a responsible and environmentally friendly way.

Follow the instructions found in the Mellanox Web site at [mellanox.com](http://mellanox.com) for proper instructions to disassemble and dispose of the Switch according to the WEEE directive.



## 4 Management and Tools Overview

The switch can be managed either remotely, or Out-of-Band using MLNX-OS.

### 4.1 Chassis Management Using the MLNX-OS™ Software

The SX10XX switches come standard with a management software module for chassis management called Mellanox Operating System (MLNX-OS). MLNX-OS is installed on all SwitchX based managed switch systems. MLNX-OS includes a CLI and chassis management software.




The Ethernet ports for remote management connect to Ethernet switches. These switches must be configured to 100M/1G auto-negotiation.

### 4.2 Configuring the Switch for the First Time

The port labelled CONSOLE must be connected to a local host PC. This must be used the first time the switch is connected. This must be done before any remote management is available.

Hook up the supplied harness cable (HAR00028) from the connector labelled CONSOLE to the DB9 connector of the local host PC.

**Figure 30: Host Connection**

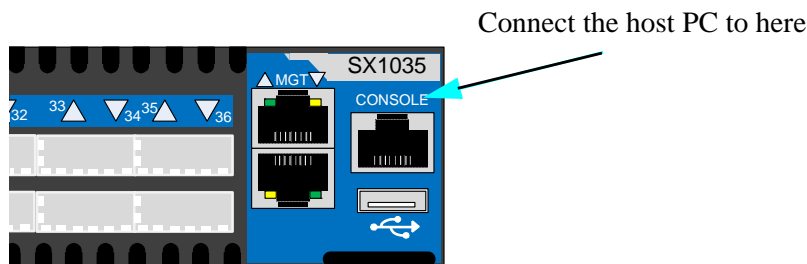

See the “*Installation Guide*” of the SX10XX switches for full instructions regarding initial configuration. See the “Configuring the Switch for the First Time” section of the “*Installation Guide*”.

#### 4.2.1 Starting a Remote Connection to the Switch

There are two ways to access the management CPU:

- via the Ethernet connector for remote access:
  - SSH
  - Telnet
  - Web

- SNMP
- XML
- via KVM connections locally



For details on the SNMP commands and MIBs supported refer to the MLNX-OS Software Command Reference Guide.

## 4.2.2 Upgrading Software

Software and firmware updates are available from the Mellanox Support website. Copy the update to a known location on a Remote server within the user's LAN.

Use the CLI in order to perform Software upgrades. For further information please refer to the MLNX-OS User Manual.

Be sure to read and follow all of the instructions regarding the updating of the software on your switch system.

## 5 Troubleshooting

As soon as a switch is plugged in make sure that the green power LEDs on the PS units are on.

### Status LED and or Status Health LED

If either of these two LEDs is **red** unplug the switch and call your Mellanox representative.

### Power supply unit:

If the LED on the PS unit is not lit or is red, check that the power cable is plugged into a working outlet.

1. Check that the power cable has a voltage within the range of 100 - 240 volts AC.
2. Check that the air flow direction of the PS units are consistent with the Fan module air flow.
3. Remove and reinstall the power cable.
4. Remove and reinstall the PS unit.

### The power LED for the switch shuts off:

1. Check that there is adequate ventilation. Are the fan LEDs showing that the fans are all up and running?
2. Make sure that there is nothing blocking the front or rear of the chassis and that the fan modules and ventilation holes are not blocked (especially dust over the holes).
3. If you find dust blocking the holes it is recommended to clean the fan unit and remove the dust from the front and rear panels of the switch using a vacuum cleaner.

### The green power LED for the fans does not come on:

1. Check that the Power LEDs are on.
2. Remove and reinstall the fan unit. Make sure the mating connector of the new unit is free of any dirt and/or obstacles. See Section 3.6.7, “Extracting and Inserting the Fan Unit,” on page 38.
3. Check that the mating connector pins are not bent.



Caution: Do not run the switch if the System Status LED for the Fans is Red!

### The link LED for the connector does not come on:

1. Check that both ends of the cable are connected.
2. Check that the locks on the ends are secured.
3. Make sure that the latest firmware version is installed on all of the HCA cards and the switch.
4. If media adapters are used, check that all connections are good, tight, and secure.

**The activity LED does not come on:**

Check that the Subnet Manager has been started.

**The switch is off:**

1. Unplug the switch.
2. Wait 5 minutes.
3. Plug in the switch.
4. If the switch does not come on, check the power supplies.
5. If the switch comes on, Use the MLNX-OS management CLI to determine the cause of the Shutdown.
6. Check the temperature.
7. Check the Fan status.

**The switch is not working and unresponsive:**

1. Reset the switch.

If resetting the switch does not work:

2. Unplug the switch.
3. Wait 5 minutes.
4. Plug in the switch.
5. If the switch does not come on, check the power supplies.
6. If the switch comes on, use the MLNX-OS management CLI to determine the cause of the shutdown.

**The last software update did not succeed:**

1. Connect the RS232 connector (CONSOLE) to a laptop.
2. Push the reset button on the switch or management module.
3. You will have ~ 5 seconds to stop the U-Boot by pressing Control-B.
4. Choose the image to upload. Only use image 1 or image 2.

```
U-Boot 2009.01-mlnx1.4 (May 12 2010 - 14:08:15)
```

```
CPU: AMCC PowerPC 460EX Rev. A at 1000 MHz (PLB=200, OPB=100,  
EBC=100 MHz)
```

```
Security/Kasumi support
```

```
Bootstrap Option H - Boot ROM Location I2C (Addr 0x52)
```

```
Internal PCI arbiter disabled
```

```
32 kB I-Cache 32 kB D-Cache
```

```
Board: Mellanox PPC460EX Board
```

```
FDEF: No
I2C: ready
DRAM: 2 GB (ECC enabled, 400 MHz, CL3)
FLASH: 16 MB
NAND: 1024 MiB
PCI: Bus Dev VenId DevId Class Int
PCIE0: link is not up.
PCIE1: successfully set as root-complex
      01 00 15b3 bd34 0c06 00
Net: ppc_4xx_eth0, ppc_4xx_eth1
Hit Ctrl+B to stop autoboot: 0

Mellanox MLNX-OS

Boot Menu:
  1. EFM_PPC_M460EX EFM_1.1.1000 2010-06-24 16:32:03 ppc
  2. EFM_PPC_M460EX EFM_1.1.1200 2010-06-25 18 :00:03 ppc
  3. U-Boot prompt

Choice:
```

5. Select the image to boot.

## Appendix A: Specification

**Table 11 - SX103[56] Specification Data**

Physical				
<b>Size</b>	Size: SX103[56]B (short)	1.716" (1U) H x 16.85" W x 16.8" D 43.6mm X 427.9mm X 428.9mm	SX1056S (Standard i.e. long)	1.716" (1U) H x 16.8" W x 24.75" D 43.6mm X 427.8mm X 628.9 mm
<b>Weight / Center of Gravity</b>	Weight: <b>Short:</b>	7.08kg 1 PS unit 7.82kg 2 PS units 8.02kg 1 PS unit 8.76kg 2 PS units	Center of Gravity:  Short:	As measured from the Connector side, left side bottom corner.  1PS unit 21.6mm X 193mm X 209.8mm 2PS units 21.6mm X 214mm X 218.8mm Standard: 1PS unit 21.6mm X 201mm X 337mm 2PS units 21.6mm X 214mm X 348mm
<b>Mounting</b>	Mounting:	19" Rack mount		
<b>SerDes Speeds / Connector Types</b>	SerDes Speeds:	10, 20, or 40, Gb/s per port	Connector Types:	QSFP Can use QSFP to SFP+ adapter modules
<b>Air Flow/ Heat dissipation</b>	Air Flow:	62 CFM	Heat dissipation: Maximum	798 BTUs/hr
Power and Environmental				
<b>Input Voltage / Management CPU</b>	Input Voltage:	100 - 240 VAC 50-60Hz	Management CPU:	PowerPC 460EX CPU
<b>Power numbers</b>	Power Consumption:	PS unit fan is always at 70%	Typ@Typ: 40GbE Active Cables: Passive cables:	182W – 5W/port 100W – 2.8W/port
<b>Cable power / Temperature</b>	QSFP	MAX 2.0W TYP: 1.5W	Temperature: Operating Non-operating	0° to 45° Celsius -40° to 70° Celsius
<b>Shock and Vibration/ Humidity</b>	Shock and Vibration:	ETSI EN 300 019-2-2: 1999-09	Humidity: Operating	5% - 95% non-condensing

Protocol Support		
<b>Speed protocol \ QoS / Management</b>	Ethernet: Auto-Negotiation of (40Gb/s, 10Gb/s, 1Gb/s)	Management: Managed using MLNX-OS
<b>Data Rate</b>	Data Rate: 40Gb/s	
Regulatory Compliance		
<b>Safety \ EMC (Emissions)</b>	Safety: US/Canada: cTUVus EU: IEC60950 International: CB	EMC (Emissions): USA: FCC, Class A Canada: ICES, Class A EU: EN55022, Class A EU: EN55024, Class A EU: EN61000-3-2, Class A EU: EN61000-3-3, Class A Japan: VCCI, Class A
<b>Environmental / Acoustic</b>	Environmental: EU: IEC 60068-2-64: Random Vibration EU: IEC 60068-2-29: Shocks, Type I / II EU: IEC 60068-2-32: Fall Test	Acoustic: ISO 7779 ETS 300 753
Scalability and Performance		
<b>Switching Performance / Capacity</b>	Switching Performance: Simultaneous wire-speed any port to any port	Switching Capacity: 2.88Tb/s
Reliability, Availability and Serviceability Features		
<b>Hot swapability / Redundancy</b>	Hot-Swappable: Fan Module 1+1 Redundant: Power Supplies	

## A.1 Approved Cables

For a list of all approved cables see:

[www.mellanox.com/related-docs/user\\_manuals/Mellanox\\_approved\\_cables.pdf](http://www.mellanox.com/related-docs/user_manuals/Mellanox_approved_cables.pdf)

## A.2 EMC Certifications

The list of approved certifications per switch in different regions of the world is located on the Mellanox Website at:

[www.mellanox.com/related-docs/user\\_manuals/Regulatory\\_and\\_Compliance\\_Guide.pdf](http://www.mellanox.com/related-docs/user_manuals/Regulatory_and_Compliance_Guide.pdf)

EMC statements are also in the Regulatory and Compliance Guide.

## Appendix B: Thermal Threshold Definitions

There are three thermal threshold definitions for the SwitchX® switch device which impact the overall switch system operation state: Warning, Critical and Emergency.

### 1. Warning – 100C

On managed systems only: When the SwitchX® device crosses the 100C threshold, a Warning Threshold message will be issued by the MLNX-OS management SW, indicating to system administration that the switch has crossed the Warning threshold.

Note that this temperature threshold does not require nor lead to any action by hardware (such as switch shutdown).

### 2. Critical – 120C

When the SwitchX® device crosses this temperature, the firmware will automatically shut down the device.

### 3. Emergency – 130C

In case the firmware fails to shut down the SwitchX® device upon crossing the Critical threshold, the SwitchX® device will auto-shutdown upon crossing the Emergency (130C) threshold.



## Appendix C: Transferring the Power Cord

To use the rail kit to transfer the power cord from the connector side to the power side follow these directions. Do you want to install power cords on both sides of the switch or only one side? For each power cord you want to transfer:


1. Once you have decided which side of the switch will be next to the vertical support?
2. Make sure that you place the cord so that the correct end of the cord will be at the power side of the switch. This will depend on which of the four mounting options you choose.

**Figure 31: Transfer Power Cord**



3. Put the power cord in the switch slide channel.
4. Push the cord end through the hole in the switch slide. Leave ~ 7" of cord hanging out from the hole.

**Figure 32: Put the Cord Through the Switch Slide Before Screwing it to the Switch**

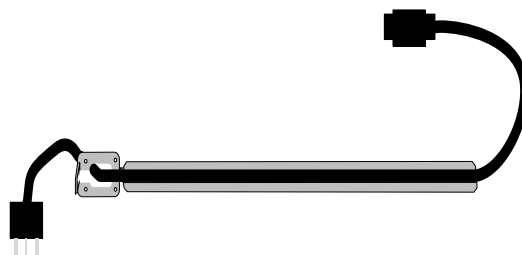

5. Screw the switch slides to the switch.

**Figure 33: Screw the Switch Slide to the Switch**




**Figure 34: Transfer Power Cord Finished**



6. Return to step 4 on page 25 and continue the installation.


## Appendix D: QSFP Interface

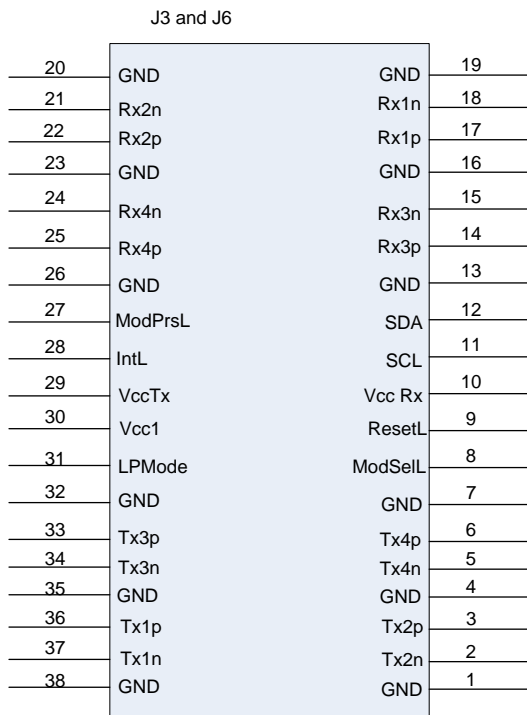

**Table 12 - InfiniBand QSFP Connector Pinout**


Connector Pin Number	Connector Pin Name	Signal Description
1	GND	Ground
2	Tx2n	Transmitter Inverted Data Input
3	Tx2p	Transmitter Non-Inverted Data Input
4	GND	Ground
5	Tx4n	Transmitter Inverted Data Input
6	Tx4p	Transmitter Non-Inverted Data Input
7	GND	Ground
8	ModSelL	Module Select
9	ResetL	Module Reset
10	Vcc Rx	+3.3 V Power supply receiver
11	SCL	2-wire serial interface clock
12	SDA	2-wire serial interface data
13	GND	Ground
14	Rx3p	Receiver Non-Inverted Data Output
15	Rx3n	Receiver Inverted Data Output
16	GND	Ground
17	Rx1p	Receiver Non-Inverted Data Output
18	Rx1n	Receiver Inverted Data Output
19	GND	Ground
20	GND	Ground
21	Rx2n	Receiver Inverted Data Output 3
22	Rx2p	Receiver Non-Inverted Data Output 3
23	GND	Ground
24	Rx4n	Receiver Inverted Data Output 3
25	Rx4p	Receiver Non-Inverted Data Output 3
26	GND	Ground
27	ModPrsL	Module Present
28	IntL	Interrupt
29	Vcc Tx	+3.3 V Power supply transmitter
30	Vcc 1	+3.3 V Power Supply
31	LPMMode	Low Power Mode
32	GND	Ground
33	Tx3p	Transmitter Non-Inverted Data Input
34	Tx3n	Transmitter Inverted Data Input
35	GND	Ground
36	Tx1p	Transmitter Non-Inverted Data Input
37	Tx1n	Transmitter Inverted Data Input
38	GND	Ground

Figure 35: QSFP Connector Male and Female Views

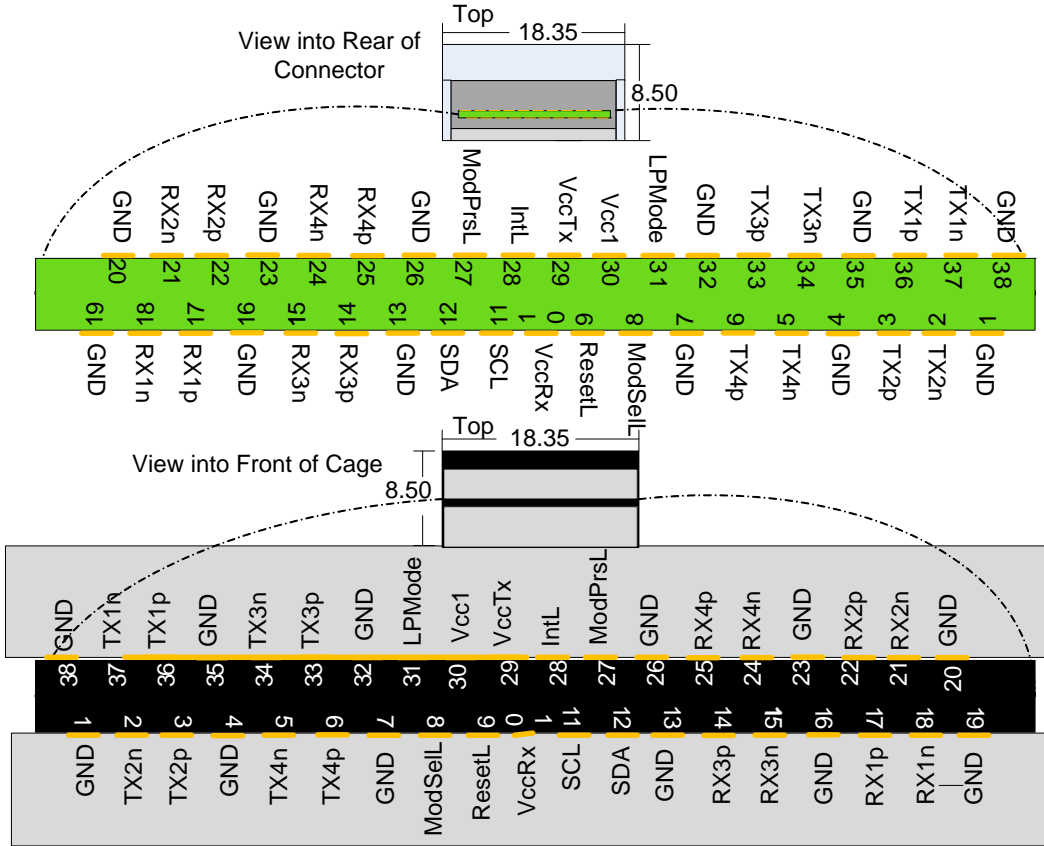


# Appendix E: RJ-45 CONSOLE and Ethernet interfaces

The RJ-45 CONSOLE and Ethernet interfaces uses the EIA 568A standard wiring color coding.

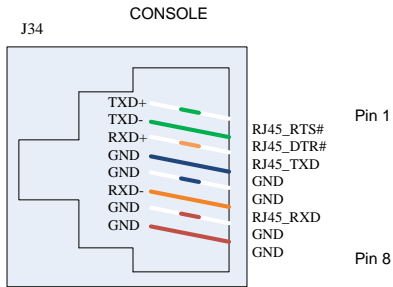

**Table 13 - RJ-45 Pinout**

Connection	Signal	Pin#	Color
TXD+	RJ-45_RTS#	1	G/W
TXD-	RJ-45_DTR#	2	G
RXD+	RJ-45_TXD	3	O/W
GND	GND	4	Bl
GND	GND	5	Bl/W
RXD-	RJ-45_RXD	6	O
GND	GND	7	Br/W
GND	GND	8	Br

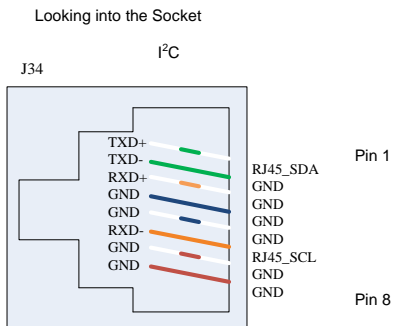

Looking into the Socket

## Appendix F: Replacement Parts Ordering Numbers

**Table 14 - Replacement Parts Ordering Numbers**

Part Description	OPN
I2C DB9 or RJ-45 to USB Adapter	MTUSB-1
Fan module with power supply side to connector side air flow	MSX60-FF
Fan module with connector side to power supply side air flow	MSX60-FR
300W Power Supply w/ Power Supply Side to Connector side air flow	MSX60-PF
300W Power Supply w/ Connector side to Power Supply side air flow	MSX60-PR
Power cord Type C13-C14	ACC000251
Power cord Type B for USA, Canada, Mexico, Taiwan	ACC000204
Power cord Type H for Israel	ACC000205
Power cord Type E/F for Sweden, France, Germany, Netherlands, Russia	ACC000207
Power cord Type G for UK	ACC000208
Power cord Type D for India	ACC000209
Power cord Type I for China	ACC000210
Power cord Type J for Switzerland	ACC000211
Power cord Type B for Japan,	ACC000212
Power cord Type I for Australia	ACC000213
Installation Kit for short switches in racks 40-60 cm deep	MSX60-BKIT
Installation Kit for short or standard switches in racks 60-80 cm deep	MSX60-SKIT

## Appendix G: Avertissements de sécurité d'installation (French)

### 1. Instructions d'installation



Lisez toutes les instructions d'installation avant de brancher le matériel à la source d'alimentation électrique.

### 2. Température excessive



Ce matériel ne doit pas fonctionner dans une zone avec une température ambiante dépassant le maximum recommandé de 45°C (113°F). Un flux d'air de 200LFM à cette température ambiante maximale est nécessaire. En outre, pour garantir un bon écoulement de l'air, laissez au moins 8 cm (3 pouces) d'espace libre autour des ouvertures de ventilation.

### 3. Empilage du châssis



Le châssis ne doit pas être empilé sur un autre matériel. Si le châssis tombe, il peut provoquer des blessures corporelles et des dégradations de biens.

### 4. Connexion d'Alimentation électrique excédentaire -dangers électriques



Ce produit comporte un couvercle transparent sur l'espace pour l'alimentation électrique redondante.  
Ne pas faire fonctionner le produit si le couvercle transparent n'est pas solidement fixé ou s'il est enlevé.

### 5. Système de fusible neutre/à double pôle



Avertissement: Système de fusible neutre/à double pôle. Veuillez débrancher tous les cordons d'alimentation avant d'ouvrir le boîtier de ce produit ou de toucher un de ses composants internes.

### 6. Orages – dangers électriques



Pendant un orage, il ne faut pas utiliser le matériel et il ne faut pas brancher ou débrancher les câbles.

### 7. Branchement/débranchement des câbles en cuivre



Les câbles InfiniBand en cuivre sont lourds et ne sont pas flexibles, il faut donc faire très attention en les branchant et en les débranchant des connecteurs. Consultez le fabricant des câbles pour connaître les mises en garde et les instructions spéciales.

## 8. Risque de choc et de danger



Risque de choc et de danger électriques. Le débranchement d'une seule alimentation stabilisée ne débranchera uniquement qu'un module "Alimentation Stabilisée". Pour isoler complètement le module en cause, il faut débrancher toutes les alimentations stabilisées.



Risk of electric shock and energy hazard.  
The PSUs are all independent.  
Disconnect all power supplies to ensure a powered down state inside of the switch platform.

## 9. Montage et entretien sur baie



Lorsque ce produit est monté ou entretenu sur baie, il faut prendre des précautions spéciales pour s'assurer que le système reste stable. En général, il faut remplir la baie avec du matériel de bas en haut.

## 10. Fuite >3.5mA Leakage >3.5mA



« ATTENTION – La connexion à la terre des forts courants de fuite est essentielle avant le branchement de l'alimentation. »  
Avant de brancher l'appareil à la conduite d'alimentation, les vis de protection à la terre du terminal de l'appareil doivent être appliquées à l'installation de protection à la Terre du bâtiment.

## 11. Forts Courants de Fuite High Leakage Current



Attention: Forts courants de fuite. Il est essentiel de relier à la terre avant de brancher l'alimentation.

## 12. Ajouter une information de connexion à la masse Connect a Valid Ground to this Device



Avant de brancher l'appareil à la conduite d'alimentation, les vis de protection à la terre du terminal de l'appareil doivent être appliquées à l'installation de protection à la Terre du bâtiment.

## 13. Installation du matériel



Ce matériel ne doit être installé, remplacé ou entretenu que par du personnel formé et qualifié.



#### 14. Elimination du matériel



L'élimination de ce matériel doit s'effectuer dans le respect de toutes les législations et réglementations nationales en vigueur.

#### 15. Codes électriques locaux et nationaux



Ce matériel doit être installé dans le respect des codes électriques locaux et nationaux.

#### 16. Codes d'installation



L'appareil doit être installé selon l'ancienne version des codes électriques nationaux du pays. Pour l'Amérique du Nord, l'équipement doit être installé conformément aux spécifications du Code Electrique National Américain et du Code Electrique Canadien.

#### 17. Interconnexion des unités



Les câbles de branchement à l'unité RS232 et les interfaces Ethernet doivent être certifiés UL de type DP-1 ou DP-2. (Note - lorsqu'il existe dans un circuit non LPS)

Protection contre la surintensité : Un appareil de protection répertorié facilement accessible contre la surintensité du circuit de branchement et calibré à 20A doit être incorporé dans le câblage électrique du bâtiment.

#### 18. Exposition au rayonnement grave



Mise en garde – l'utilisation de commandes ou de réglages ou l'exécution de procédures autres que ce qui est spécifié dans les présentes peut engendrer une exposition au rayonnement grave.



PRODUIT LASER DE CLASSE 1 » et références aux normes laser les plus récentes CEI 60 825-1:1993 + A1:1997 + A2:2001 et NE 60825-1:1994+A1:1996+ A2:2001

#### 19. S'assurer que les enceintes sont appropriées



Des enceintes électriques, mécaniques et incendie adaptées doivent être fournies par le fabricant du produit final ou par l'utilisateur final.

## 20. Cordons électriques CA homologués UL




Pour les prises électriques en Amérique du Nord, choisissez un cordon électrique homologué UL et certifié CSA

à 3 conducteurs, [18 AWG], terminé par une fiche moulée, d'une tension nominale de 125 V, [15 A], avec une longueur minimale de 1,5 m [6 pieds] et d'une longueur maximale de 4,5 m [18 pieds]


Pour les prises électriques en Europe, choisissez un cordon électrique harmonisé internationalement et marqué "<HAR>",

à 3 conducteurs, d'un diamètre de fil minimum de 0,75 mm<sup>2</sup>, d'une tension nominale de 300 V, avec une gaine isolée en PVC. Le cordon doit avoir une fiche moulée d'une tension nominale de 250 V et d'une intensité nominale de 10 A.

21.

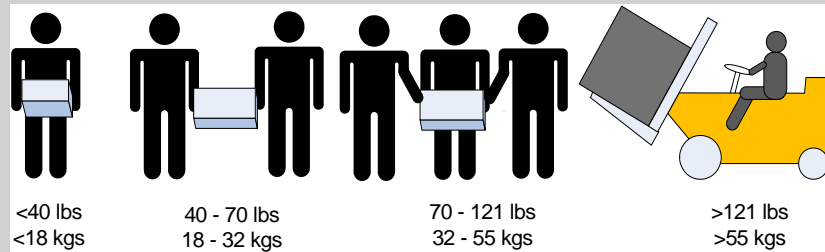

## 22. Conformément à la Directive WEEE

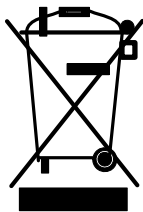

Conformément à la Directive WEEE 2002/96/EC, les déchets d'équipements électriques et électroniques (EEE) doivent être triés et ne peuvent être éliminés avec les déchets ménagers.

Veuillez disposer de ce produit et de tous ses composants de manière responsable et respectueuse de l'environnement.

23.

# Anhang H: Installation - Sicherheitshinweise (German)

## 1. Installationsanleitungen



Lesen Sie alle Installationsanleitungen, bevor Sie das Gerät an die Stromversorgung anschließen.

## 2. Übertemperatur



Dieses Gerät sollte nicht in einem Bereich mit einer Umgebungstemperatur über der maximal empfohlenen Temperatur von 45°C (113°F) betrieben werden. Es ist ein Luftstrom von 200 LFM bei maximaler Umgebungstemperatur erforderlich. Außerdem sollten mindestens 8 cm (3 in.) Freiraum um die Belüftungsöffnungen sein, um einen einwandfreien Luftstrom zu gewährleisten.

## 3. Stapeln des Chassis



Das Chassis sollte nicht auf andere Geräte gestapelt werden. Wenn das Chassis herunterfällt, kann es zu Verletzungen und Beschädigungen an Geräten führen.

## 4. Redundanter Stromversorgungsanschluss - Elektrische Gefahr



Dieses Produkt verfügt über eine Abdeckung über dem Bereich für die redundante Stromversorgung. Betreiben Sie das Produkt nicht, wenn diese Abdeckung nicht sicher fest sitzt oder entfernt wurde.

## 5. Bei Gewitter - Elektrische Gefahr



Arbeiten Sie während eines Gewitters und Blitzschlag nicht am Gerät, schließen Sie keine Kabel an oder ab.

## 6. Anschließen/Trennen von Kupferkabel



Kupferkabel sind schwer und nicht flexible. Deshalb müssen sie vorsichtig an die Anschlüsse angebracht bzw. davon getrennt werden. Lesen Sie die speziellen Warnungen und Anleitungen des Kabelherstellers.

## 7. Gefahr des elektrischen Schocks.



Gefahr des elektrischen Schocks. Entfernen des Netzsteckers eines Netzteils spannungsfrei. Um alle Einheiten spannungsfrei zu machen sind die Netzstecker aller Netzteile zu entfernen



Risk of electric shock and energy hazard.

The PSUs are all independent.

Disconnect all power supplies to ensure a powered down state inside of the switch platform.

## 8. Rack-Montage und Wartung



Wenn dieses Produkt in einem Rack montiert oder gewartet wird, sind besondere Vorsichtsmaßnahmen zu ergreifen, um die Stabilität des Systems zu gewährleisten. Im Allgemeinen sollten Sie das Gestell von unten nach oben mit Geräten füllen.

## 9. Geräteinstallation



Diese Gerät sollte nur von geschultem und qualifiziertem Personal installiert, ausgetauscht oder gewartet werden.

## 10. Geräteentsorgung



Die Entsorgung dieses Geräts sollte unter Beachtung aller nationalen Gesetze Bestimmungen erfolgen.

## 11. Regionale und nationale elektrische Bestimmungen



Dieses Gerät sollte unter Beachtung der regionalen und nationalen elektrischen Bestimmungen installiert werden.

## 12. Richtigen Schutz sicherstellen



Geeigneter elektrischer, mechanischer und Feuerschutz sind vom Hersteller des Endprodukts oder dem Endbenutzer bereitzustellen.

## 13. Strahlenkontakt



Achtung – Nutzung von Steuerungen oder Einstellungen oder Ausführung von Prozeduren, die hier nicht spezifiziert sind, kann zu gefährlichem Strahlenkontakt führen..



Klasse 1 Laserprodukt und Referenzen zu den aktuellsten Lasterstandards :  
ICE 60 825-1:1993 + A1:1997 + A2:2001 und EN 60825-1:1994+A1:1996+ A2:2001

#### 14. UL-und CSA Certified Netzkabel



Für Nordamerika Stromanschluss, wählen Sie ein Netzkabel, das UL-und CSA Certified

3 - Leiter, [18 AWG], mit einem angespritztem Stecker bewertet bei 125 V, [15], mit einer Mindestlänge von 1,5 m [Six Feet] aber nicht mehr als 4,5 m.

Für die europäischen Zusammenhang, wählen Sie ein Netzkabel, das international harmonisiert und der Aufschrift "<HAR>",

3 - Leiter, mindestens 0,75 mm<sup>2</sup> Draht, bewertet mit 300 V, mit einem PVC-Mantel isoliert. Das Kabel muss eine angespritztem Stecker bewertet bei 250 V, 10 A. "

#### 15. Ableitstrom > 3.5mA LEAKAGE >3.5mA



WARNUNG: Hohe Ableitstrom; Earth Verbindung, bevor Sie die Verbindung von wesentlicher Bedeutung werden.

#### 16. Add GND Verbindung Informationen



Bevor Sie dieses Gerät an das Stromnetz, die Schutz Erde Terminal Schrauben dieses Gerät muss an den Schutzleiter in der Gebäudeinstallation.

#### 17. Installation Codes



Dieses Gerät muss installiert sein, entsprechend auf die neueste Version des Landes National Electrical Code. Für Nordamerika, müssen in Übereinstimmung mit den geltenden Vorschriften in der US-amerikanischen National Electrical Code und dem Canadian Electrical Code.

#### 18. Zusammenschaltung von EINHEITEN



Kabel für den Anschluss an das Gerät RS232-und Ethernet-Schnittstellen müssen UL zertifiziert Typ DP-1 oder DP-2. (Hinweis-, wenn nicht mit Wohnsitz in LPS-Schaltung)

Überstromschutz: Eine leicht zugängliche Auflistung Abzwegleitung Überstrom-Schutz einrichtung 20 A bewertet werden müssen in dem Gebäude Verkabelung.


#### 19. Zweipolige bzw. Neutraleiter-Sicherung im Netzteil




Achtung:

Zweipolige bzw. Neutraleiter-Sicherung im Netzteil. Netzstecker ziehen, um sicherzustellen, daß keine Spannung am Gerät anliegt. Entfernen Sie alle Netzkabel vor dem Öffnen der Abdeckung dieses Produkts oder dem Berühren der Innenteile.

## 20. Bodily Injury Due to Weight

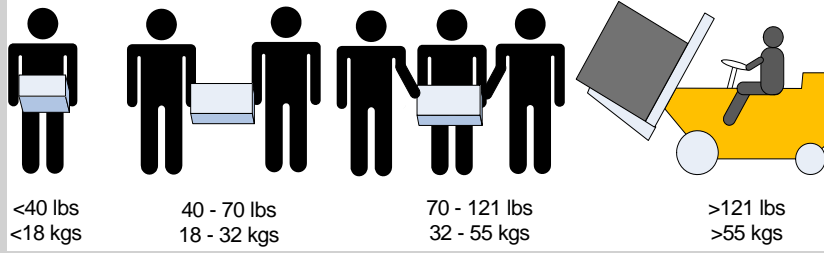

Use enough people to safely lift this product.

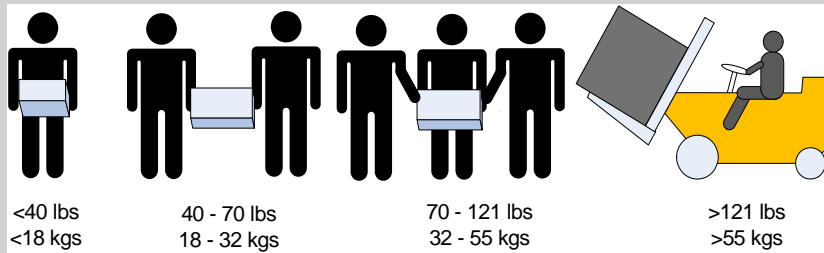


# Appendix I: Advertencias de seguridad para la instalación (Spanish)

## 1. Instrucciones de instalación



Antes de conectar el equipo a la fuente de alimentación, leer todas las instrucciones de instalación.

## 2. Lesión corporal por peso

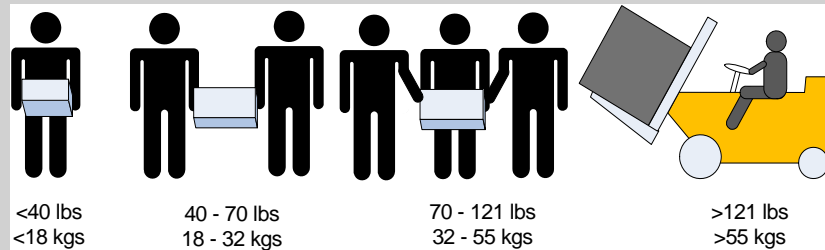

## 3. Lesión corporal por peso



This equipment is very heavy and should be moved using a mechanical lift to avoid injuries.

## 4. Sobrecalentamiento



No se debe utilizar el equipo en un área con una temperatura ambiente superior a la máxima recomendada: 45°C. Además, para garantizar una circulación de aire adecuada, se debe dejar como mínimo un espacio de 8 cm (3 pulgadas) alrededor de las aberturas de ventilación.

## 5. Apilamiento del chasis



Los chasis no se deben apilar sobre otros equipos. La caída del chasis podría causar lesiones corporales, así como daños al equipo.

## 6. Dos fusibles, uno en el polo y otro en el neutro



Dos fusibles, uno en el polo y otro en el neutro. Quitar los cables de corriente antes de abrir la tapa de este producto o tocar cualquier componente interno.

## 7. Cuando hay rayos: peligro de descarga eléctrica



No utilizar el equipo ni conectar o desconectar cables durante períodos de actividad de rayos.

## 8. Conexión y desconexión del cable Copper



Dado que los cables de cobre son pesados y no son flexibles, su conexión a los conectores y su desconexión se deben efectuar con mucho cuidado. Para ver advertencias o instrucciones especiales, consultar al fabricante del cable.

## 9. Montaje y mantenimiento de bastidores



Al instalar o realizar el mantenimiento de este aparato en un bastidor, es preciso adoptar precauciones especiales para garantizar que el sistema se mantenga estable. En general, en un bastidor, los equipos se deben instalar comenzando desde abajo hacia arriba.

## 10. Instalación de equipos



La instalación, el reemplazo y el mantenimiento de este equipo estarán a cargo únicamente de personal capacitado y competente.

## 11. Asegurar confinamientos adecuados



El fabricante del producto final o el usuario final deberán suministrar un confinamiento adecuado para componentes eléctricos y mecánicos y contra incendio.

## 12. Eliminación de equipos



La eliminación definitiva de este equipo se debe efectuar conforme a todas las leyes y reglamentaciones nacionales.

## 13. Códigos eléctricos locales y nacionales



Este equipo se debe instalar conforme a los códigos eléctricos locales y nacionales.



#### 14. Cable de alimentación homologado por UL y con certificación CSA



En conexiones de América del Norte, seleccionar un cable de alimentación homologado por UL y con certificación CSA de tres conductores, [16 AWG], terminado en un enchufe moldeado con capuchón de 125 voltios nominal, [13 A], con una longitud mínima de 1,5 metros, pero no más de 4,5 metros.

En conexiones europeas, seleccionar un cable de alimentación armonizado internacionalmente y marcado "<HAR>", de tres conductores, hilo de 1,0 mm<sup>2</sup> como mínimo, 300 voltios nominal, con cobertura protectora aislante de PVC. El cable debe tener un enchufe moldeado con capuchón de 250 voltios nominal, 10 A.

#### 15. Añadir conexión a tierra



Antes de conectar el dispositivo a la línea de alimentación, los tornillos del terminal de la puesta a tierra de protección del dispositivo se deben conectar a la puesta a tierra de protección de la instalación del edificio.

(Información de conexión a tierra):

La instalación del edificio deberá proveer un medio para la conexión con la puesta a tierra de protección y un técnico de servicio deberá conectar permanentemente el equipo a dicho medio de conexión.


Un TÉCNICO DE SERVICIO comprobará si la toma eléctrica de la que se suministrará corriente al equipo provee una conexión con la puesta a tierra de protección del edificio. De no ser así, el TÉCNICO DE SERVICIO se encargará de instalar un CONDUCTOR DE CONEXIÓN A TIERRA DE PROTECCIÓN, del terminal de puesta a tierra de protección separado al conductor de tierra de protección del edificio. El equipo se instalará en un área donde haya conexión equipotencial, como por ejemplo, un centro de telecomunicaciones o una sala de computadoras dedicada.

#### 16. Códigos de instalación



Este dispositivo se debe instalar conforme a la versión más reciente de los códigos eléctricos nacionales del país en cuestión. En América del Norte, el equipo se debe instalar de acuerdo con las disposiciones vigentes del Código Eléctrico Nacional de los EE.UU. y del Código Eléctrico de Canadá.

#### 17. Directiva sobre RAEE

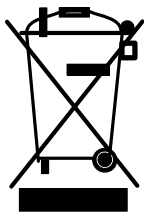

Conforme a la Directiva 2002/96/CE sobre RAEE, todos los residuos de equipos eléctricos y electrónicos (EEE) se deben recolectar por separado y no se deben eliminar junto con residuos domésticos.

Al deshacerse de este producto y de todas sus partes, hágalo de una manera responsable y respetuosa con el medio ambiente.